


ADEPTUS

ASSEMBLY INSTRUCTIONS

#78001 - 12 Drawer Taboret Cabinet

Medium Pine Finish

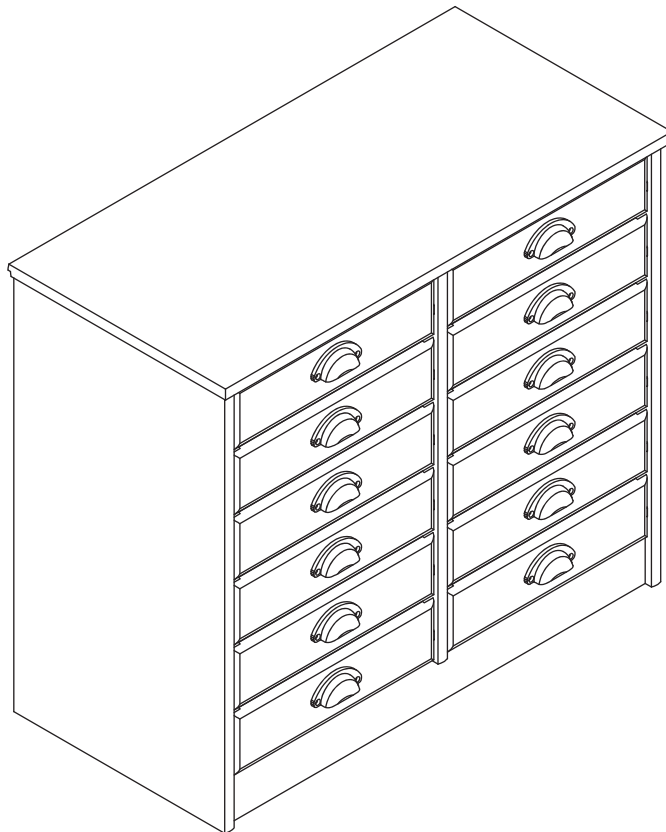

CUSTOMER SERVICE AND REPLACEMENT PARTS:

FOR FASTER SERVICE PLEASE GO TO OUR WEBSITE AT WWW.ADEPTUS.COM

OR CALL TOLL FREE 1.888.ADEPTUS (1.888.233.7887)

MON.-FRI. 10 A.M. TO 4 P.M. E.S.T., CLOSED HOLIDAYS

IF YOU CALL, PLEASE HAVE ON HAND:

1. PRODUCT NAME AND STOCK NUMBER
2. WHERE THE UNIT WAS PURCHASED
3. P.O. CODE ON THE BOTTOM OF THIS COVER PAGE OR DATE PURCHASED
4. BOX NUMBER, IF NOTED ON THE SIDE OF THE BOX

PLEASE LEAVE YOUR NAME AND NUMBER AND WE WILL DISCUSS ANY ISSUES ON OUR CALL BACK TO YOU.

HELPFUL OVERALL:

- SAVE INSTRUCTION SHEETS AND BOX UNTIL YOU ARE SATISFIED WITH THE ASSEMBLY.
- DO NOT GLUE PARTS WHEN ASSEMBLING THE UNIT, UNLESS YOU HAVE TESTED THE ASSEMBLY.
- PERFORM ASSEMBLY ON A CLEAN HARD SURFACE USING THE CARTON OR A TOWEL TO PROTECT THE SURFACE. DO NOT ASSEMBLE ON CARPET.

PLEASE VISIT WWW.ADEPTUS.COM TO REGISTER YOUR PRODUCT AND SEE THE COMPLETE ADEPTUS PRODUCT LINE.

THANK YOU FOR YOUR PURCHASE AND WELCOME TO ADEPTUS!

Many People, One Thought

PROVIDING QUALITY SOLID WOOD FURNITURE AT AN AFFORDABLE PRICE HAS BEEN A GROUP EFFORT. FROM CONCEPT TO PRODUCT DESIGN, MANUFACTURING AND RETAILING, EACH AREA FOCUSES ON THE DETAILS THAT WILL ASSURE YOU A LOW PRICE. BUT NEVER AT THE EXPENSE OF FUNCTION, STYLING, OR GOOD SENSE.

A "READY - TO - ASSEMBLE" ITEM REDUCES TRANSPORTATION AND WAREHOUSING COSTS WHICH HELP YOUR RETAILER KEEP THEIR PRICES REASONABLE. NOW, YOU ARE JOINING "TEAM ADEPTUS" WITH THE FINAL STEP, ASSEMBLY.

• YOU ASSEMBLE, YOU SAVE •










WELCOME TO ADEPTUS!

This is a SOLID WOOD product:


We inspect all wood, and follow guidelines to pass quality inspections. Solid wood furniture has knots, small cracks, and what may look like blemishes. These characteristics are a natural by product of producing furniture from natural material.

We take extra care with our drawer parts:

1. We use real wood drawers sides.
2. The drawer sides are not painted to help protect your clothes from chemical odors and residue.
3. Finely sanded drawer parts eliminate snags when storing your clothes.


A		Dowel 8.0 x 30mm	19
B		Screw 3.0 x 25mm	96
C		Screw 4.0 x 30mm	13
D		Drawer Runner	24
E		Screw 3.0 x 12mm	02
F		Nail 1.5 x 19mm	46
G		Metal Handle	12
H		Metal Corner Bracket	01
I		Screw 3.0 x 16mm	24

These tools are not supplied by the manufacturer

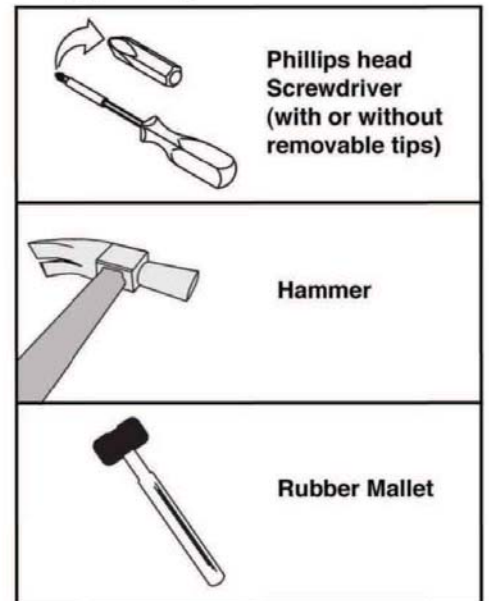

TIP: DOWELS (PART A) VARY EVER SO SLIGHTLY. IF A DOWEL (PART A) IS LOOSE WE PREFER YOU CALL OUR TOLL FREE NUMBER FOR ADDITIONAL DOWELS VS GLUING THE DOWEL.

COMPLETELY TEST ASSEMBLY FIRST IF YOU CHOOSE THE GLUE PARTS. WE DO NOT SUPPLY GLUE.

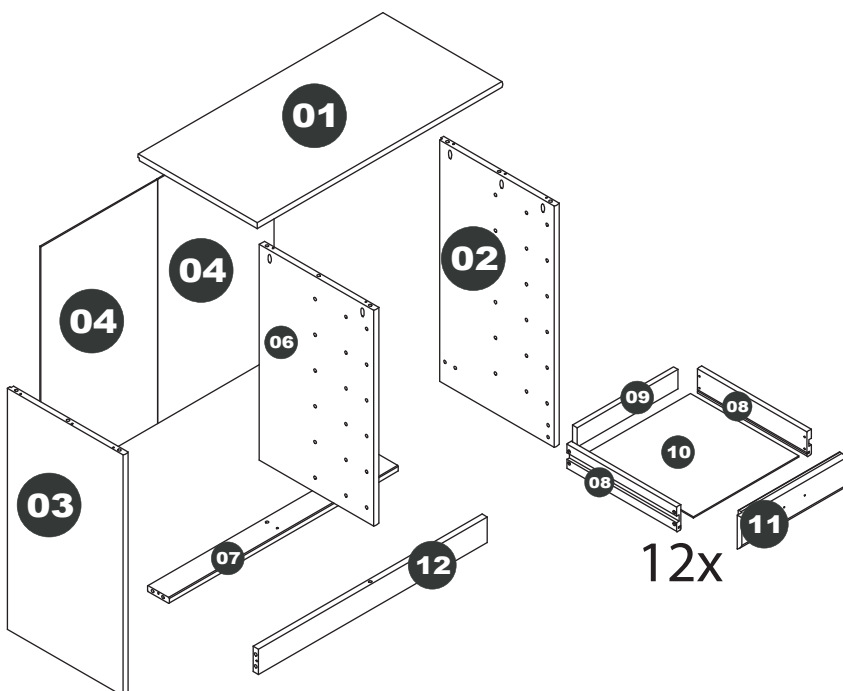

1	TOP
2	RIGHT SIDE
3	LEFT SIDE
4	BACK PANEL
6	CENTER PANEL
7	BACK CROSSBAR
8	DRAWER SIDE
9	DRAWER BACK
10	DRAWER BOTTOM
11	DRAWER FRONT
12	FRONT CROSSBAR

1


PREPARE PARTS FOR ASSEMBLY





IMPORTANT

Please do your entire assembly on a clean, clear surface to avoid damage. The flattened carton or a towel, placed ON a hard floor, not carpet, will work best for large parts. Drawers are best assembled on a counter.

Assembly on a carpet creates too much bounce.

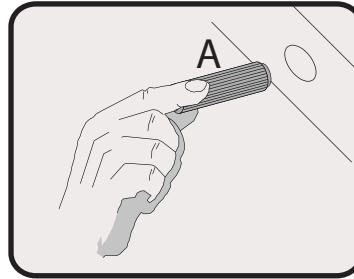

- PUSH THE DOWELS (PART A) INTO THE EDGES OF THE FOLLOWING PARTS, AS SHOWN:
(PART 2) RIGHT SIDE PANEL
(PART 3) LEFT SIDE PANEL
(PART 6) CENTER PANEL
(PART 7) BACK CROSSBAR
(PART 12) FRONT CROSSBAR

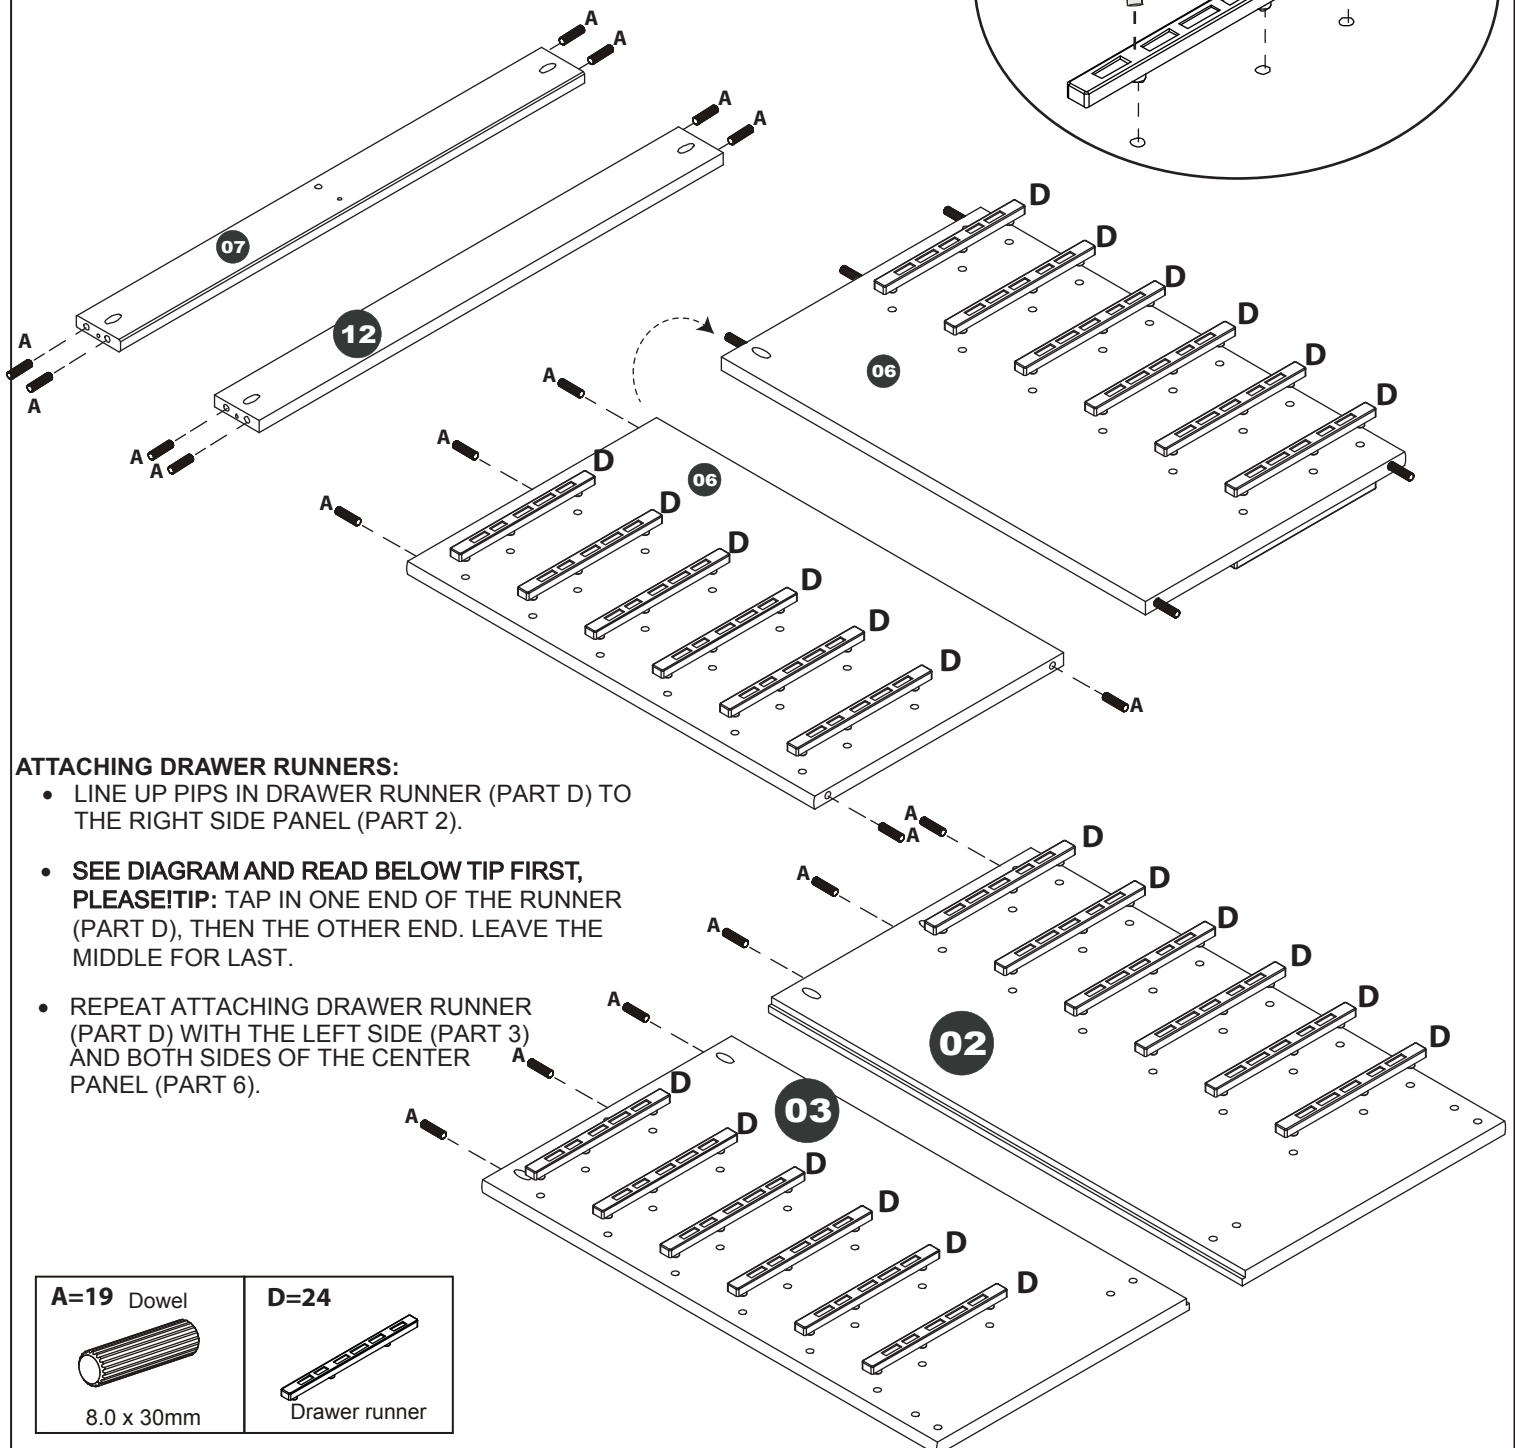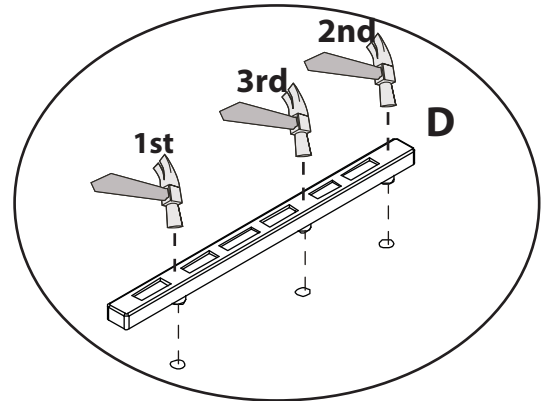

ATTACHING DRAWER RUNNERS:


- LINE UP PIPS IN DRAWER RUNNER (PART D) TO THE RIGHT SIDE PANEL (PART 2).
- SEE DIAGRAM AND READ BELOW TIP FIRST, PLEASE! TIP: TAP IN ONE END OF THE RUNNER (PART D), THEN THE OTHER END. LEAVE THE MIDDLE FOR LAST.
- REPEAT ATTACHING DRAWER RUNNER (PART D) WITH THE LEFT SIDE (PART 3) AND BOTH SIDES OF THE CENTER PANEL (PART 6).

A=19 Dowel



8.0 x 30mm

D=24




Drawer runner

2

ATTACH CROSSBARS TO RIGHT & LEFT SIDE PANELS

TIP: DO ONE SIDE AND THEN THE OTHER SIDE

- DON'T STAND RIGHT SIDE PANEL (PART 2) UP ON THE EDGE YET. TO EASY ASSEMBLY, LAY SIDE FLAT ON THE FLOOR RUNNER SIDE VISIBLE.
- ALIGN THE DOWELS IN THE FRONT & BACK CROSSBARS (PARTS 7 & 12) WITH THE PRE-DRILLED DOWEL HOLES IN THE RIGHT SIDE PANEL (PART 2) AND PUSH UNTIL THE PARTS ARE FLUSH.
- SECURE THE CROSSBARS (PARTS 7 & 12) TO THE RIGHT SIDE PANEL (PART 2) USING THE PART C SCREWS, AS SHOWN.
- STAND RIGHT SIDE PANEL (PART 2) ON ITS EDGE.
- ALIGN THE DOWELS IN THE CROSSBARS (PARTS 7 & 12) WITH THE PRE-DRILLED DOWEL HOLES IN THE LEFT SIDE PANEL (PART 3) AND PUSH UNTIL THE PARTS ARE FLUSH.
- SECURE THE CROSSBARS (PARTS 7 & 12) TO THE LEFT SIDE PANEL (PART 3) USING THE PART C SCREWS, AS SHOWN.

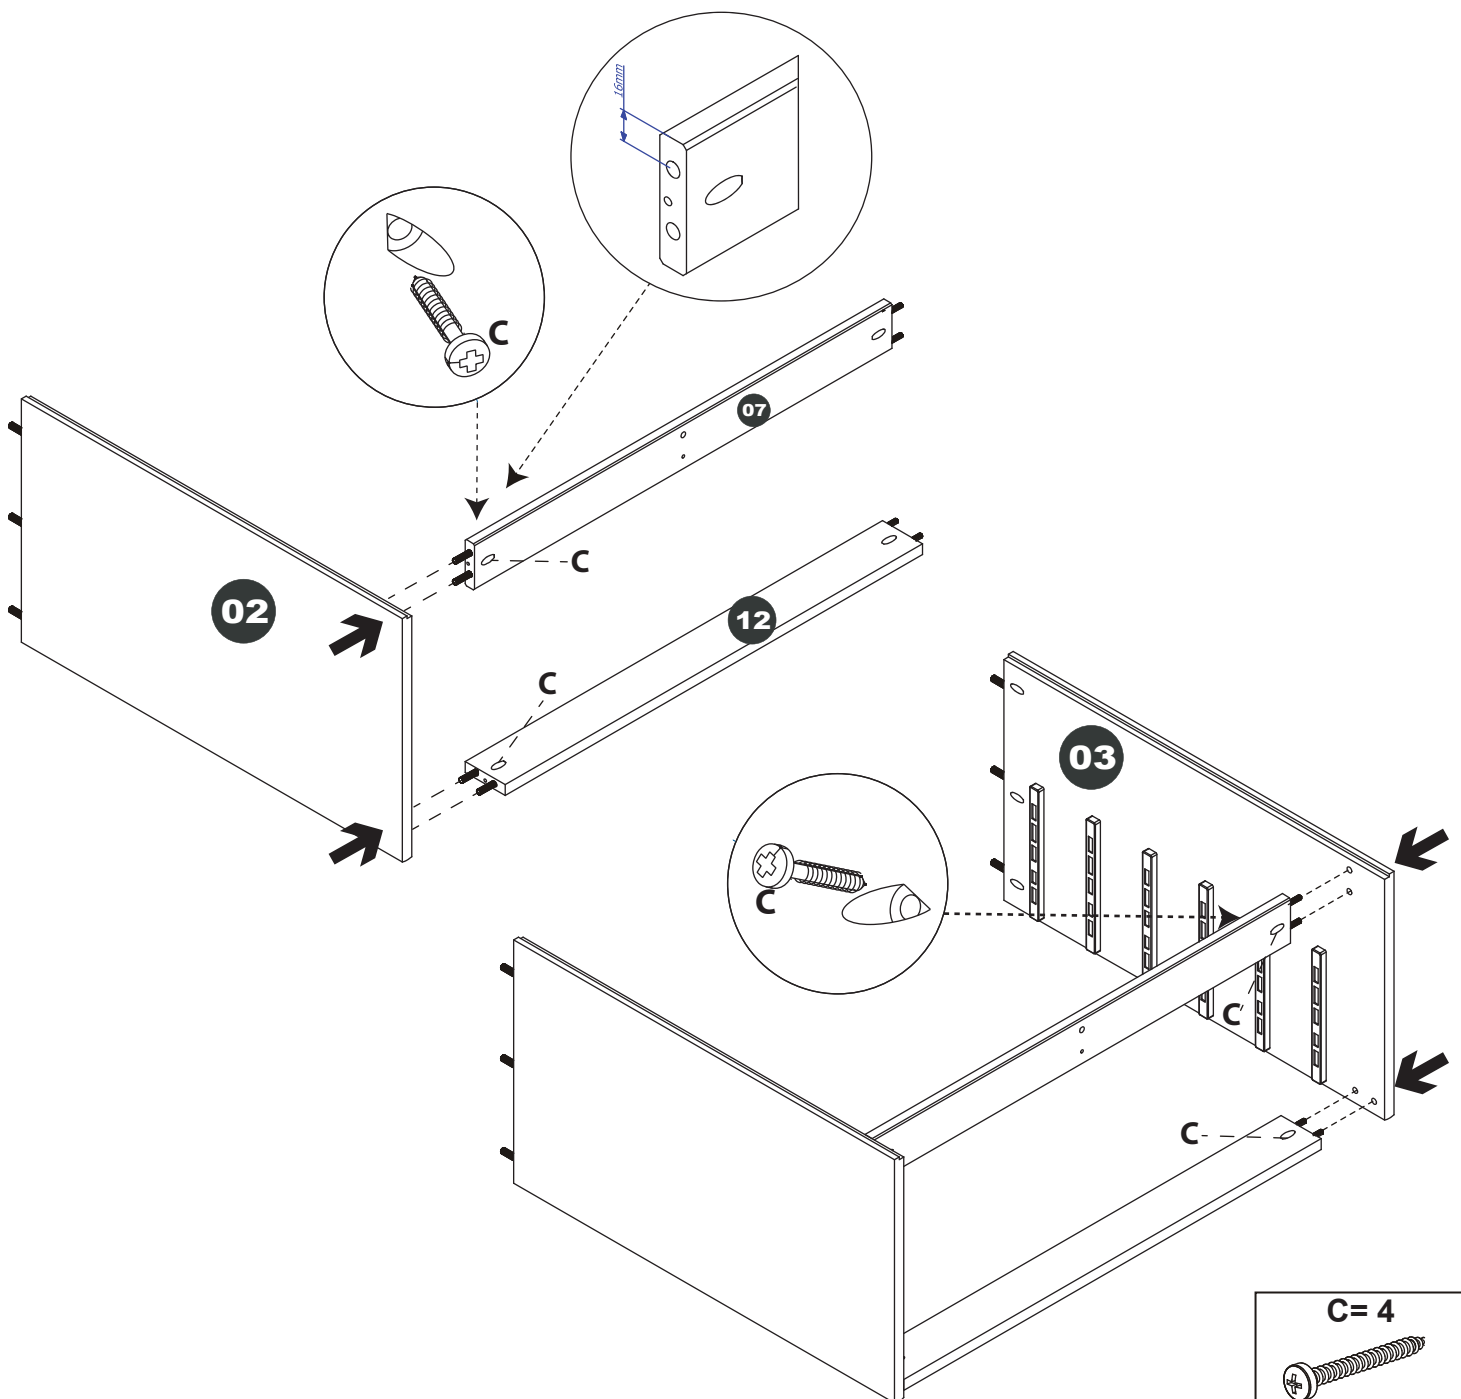

C = 4




Screw 4.0 x 30mm

3

ATTACH THE CENTER PANEL

- WITH THE UNIT LAYING FLAT ON ITS FRONT SIDE, ALIGN THE DOWELS IN THE BOTTOM OF THE CENTER PANEL (PART 6) WITH THE PRE-DRILLED DOWEL HOLES IN THE FRONT & BACK CROSSBARS (PARTS 7 & 12) AND PUSH UNTIL THE PARTS ARE FLUSH.
- SECURE THE CENTER PANEL (PART 6) TO THE BACK CROSSBAR (PART 7) USING ONE PART C SCREW, AS SHOWN.
- SECURE THE CENTER PANEL (PART 6) TO THE FRONT CROSSBAR (PART 12) USING THE PART H) METAL CORNER BRACKET AND 2 PART E SCREWS AS SHOWN IN THE ENLARGED ILLUSTRATION.

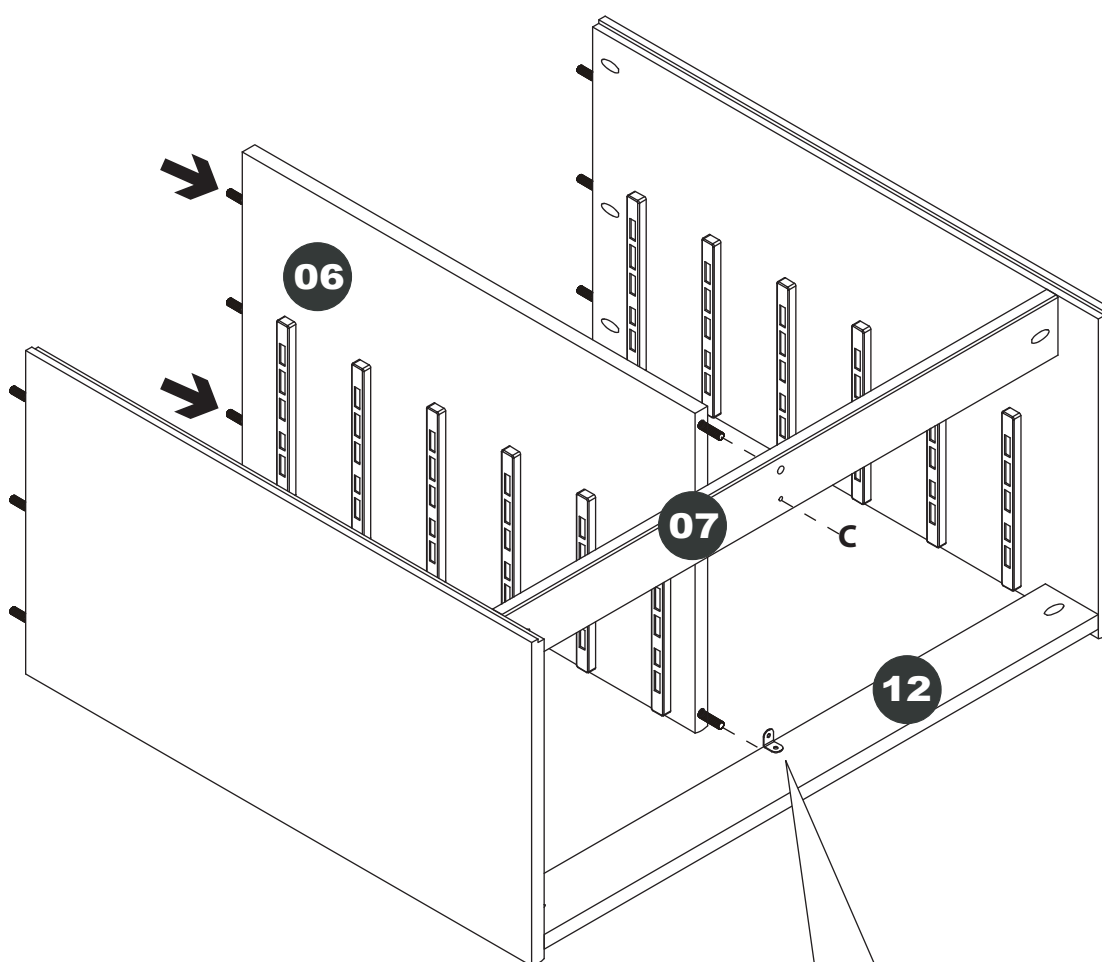

E= 2



Screw 3.0 x 12mm

H= 1



Metal
Corner Bracket

C= 1





Screw 4.0 x 30mm

4

ATTACH THE TOP

- LINE UP DOWEL HOLES IN TOP (PART 1) WITH DOWELS IN UNIT'S SIDE AND CENTER PANELS (PARTS 2, 3 & 6) AND PUSH UNTIL THE PARTS ARE FLUSH.
- TIP: TRY TURNING UNIT UPSIDE DOWN TO GET A EASIER POSITION TO SEE AND SCREW TOP (PART 1) TO SIDES AND CENTER OF UNIT.
- SEE ROUND DIAGRAM:
SLIDE (PART C) SCREWS THROUGH ANGLED POCKET HOLES AND HAND TIGHTEN FOR BEST FIT. USE 3 PART C SCREWS ON THE 2 SIDE PANELS (PARTS 1 & 2) AND 2 IN THE CENTER PANEL (PART 6) AS ILLUSTRATED.

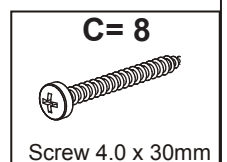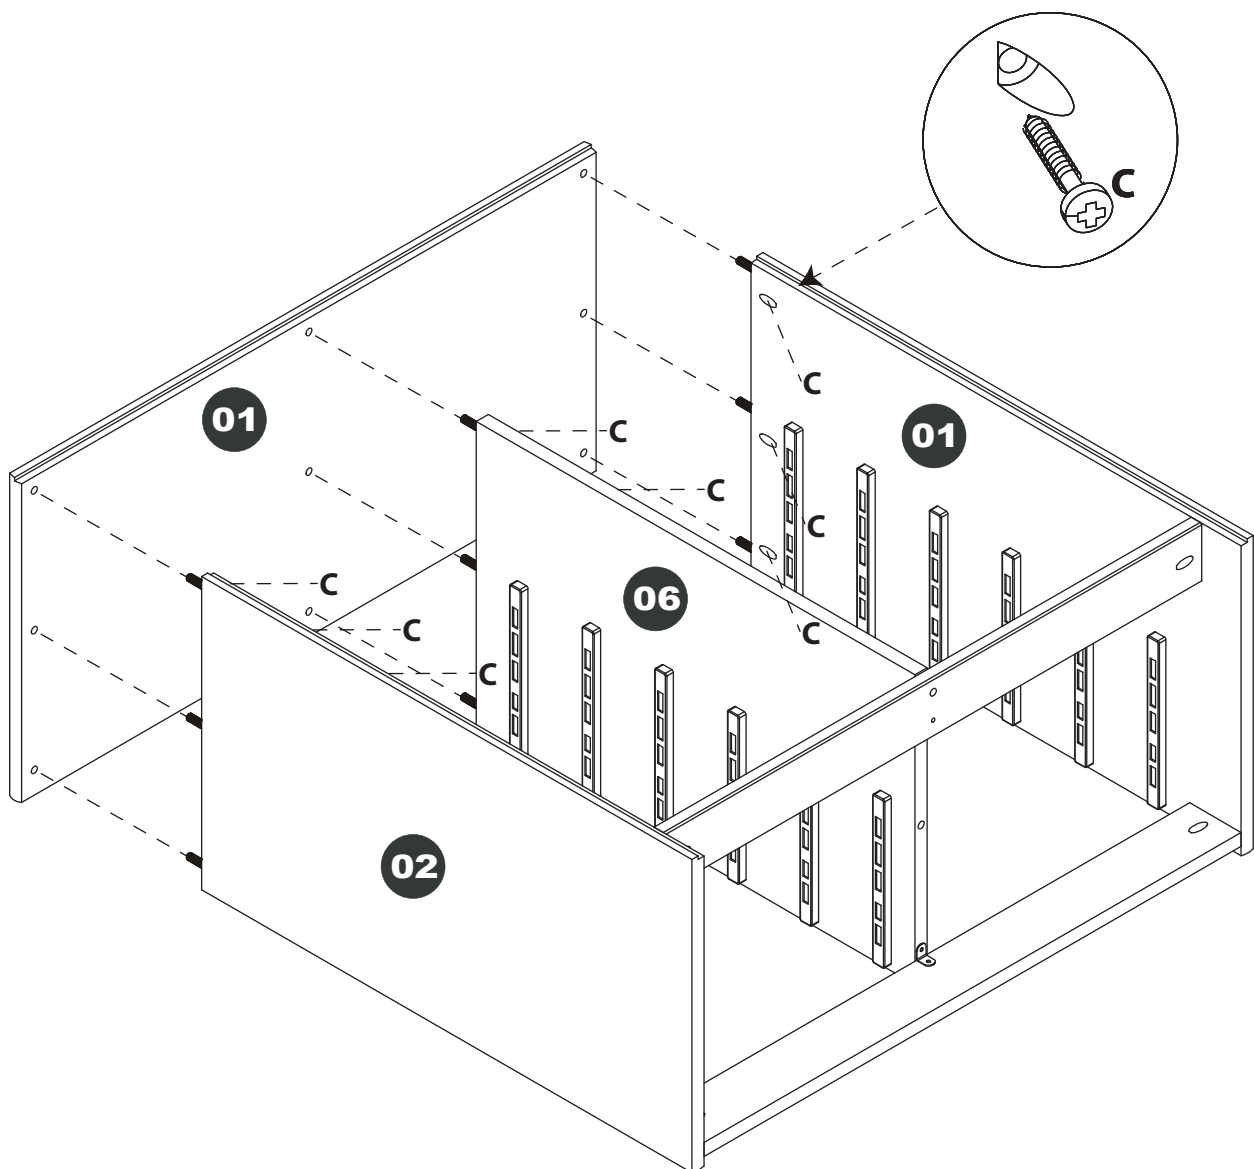


5

ATTACH THE BACK PANEL



Use all back panel nails, evenly spaced. They help make the unit strong.

- UNFOLD THE BACK PANEL (PART 4) AND HOLD IT IN THE GROOVES IN THE UNIT'S SIDES. ALSO MAKE SURE THE BACK PANEL FITS IN THE GROOVE AT THE BACK OF THE TOP.
- CHECK THAT THE UNIT IS SQUARE.
- SECURE THE (PART 4) BACK PANEL USING THE (PART F) NAILS.

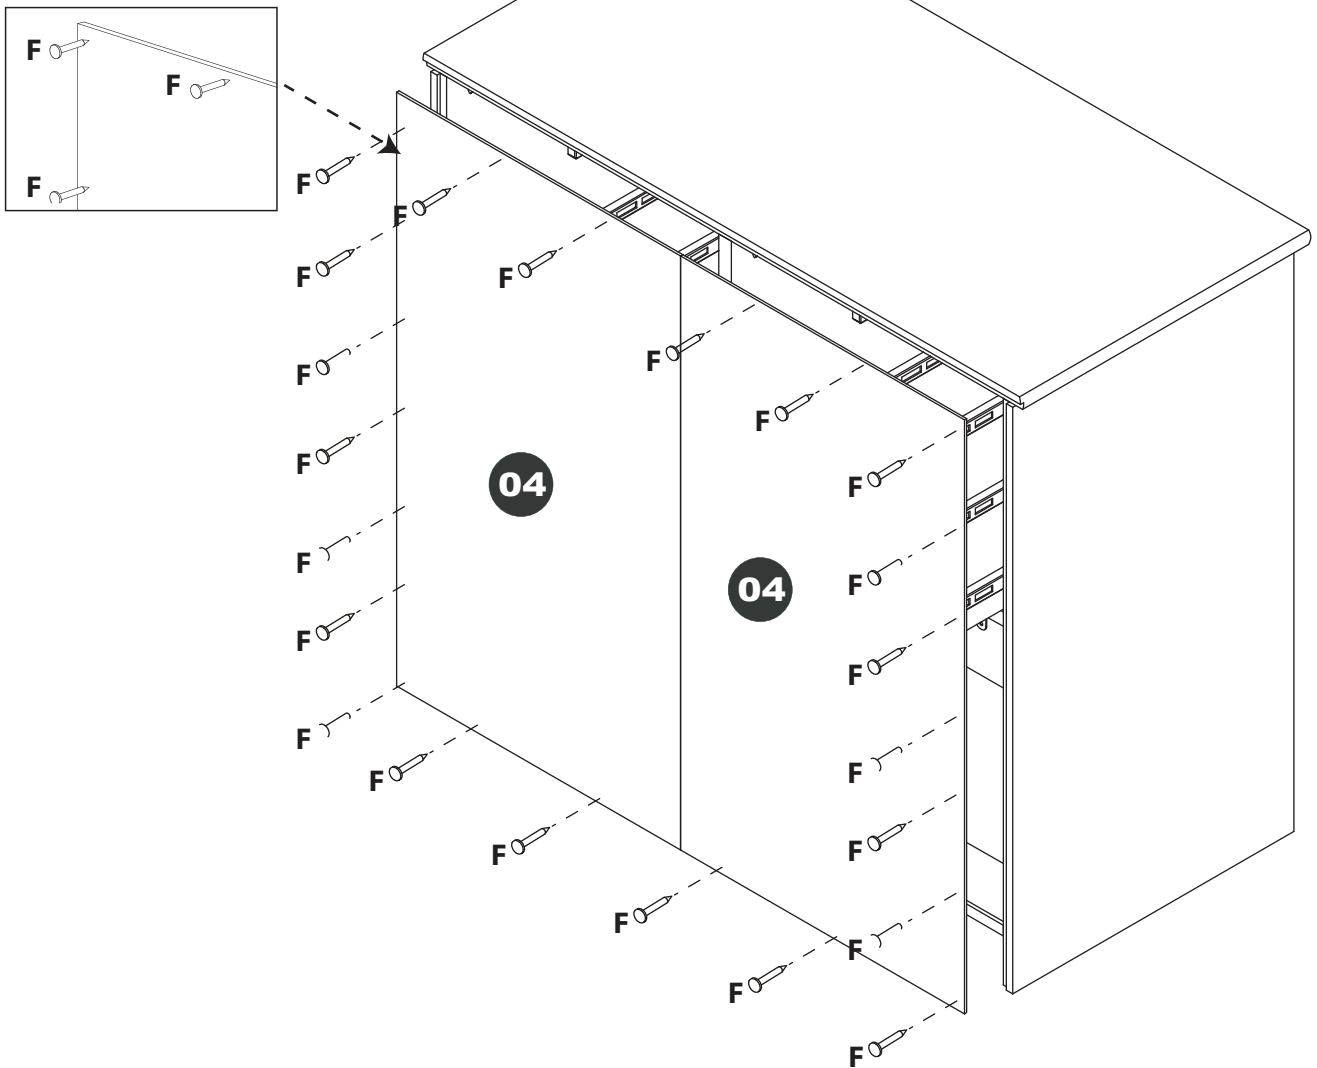

F=22



Nail

6


ASSEMBLE THE DRAWERS

- LINE UP THE BOTTOM EDGE OF THE DRAWER SIDE (PART 8) WITH THE BOTTOM EDGE OF THE DRAWER FRONT (PART 11).
- MAKE CERTAIN THE GROOVES FOR THE DRAWER BOTTOM ARE PERFECTLY ALIGNED ON ALL 3 PARTS.
- JOIN THE PARTS USING TWO SCREWS (PART B) ON EACH SIDE AS SHOWN IN THE DIAGRAM.


TIP: THE SCREWS' SHARP TIPS ARE SELF TAPPING, SO THE DRAWER FRONT DOES NOT NEED A PILOT HOLE. THE SHARP TIP STARTS THE HOLE, AND THE SCREW THREADS WILL SECURE THE PARTS IN PLACE FOR A TIGHT FIT.

- REPEAT ON THE OTHER SIDE OF THE DRAWER.
- SLIDE DRAWER BOTTOM (PART 10) TROUGH GROOVES IN THE DRAWER SIDES (PART 8). THIS WILL START SQUARING UP THE DRAWER.
- LINE UP DRAWER BACK (PART 9) WITH BOTH DRAWER SIDES (PART 8). CHECK THAT IT IS SQUARE.
- JOIN THE DRAWER BACK (PART 9) TO THE DRAWER SIDES (PART 8) USING 2 PART B SCREWS ON EACH SIDE.
- TURN THE DRAWER OVER. CONFIRM THE DRAWER BACK COVERS THE DRAWER BOTTOM (PART 10). NAIL THE DRAWER BOTTOM (PART 10) THROUGH TO THE DRAWER BACK (PART 9) USING (2) NAILS (PART F).


TIP: PLACING THE DRAWER UPSIDE DOWN ON A COUNTER POSITIONED WITH THE DRAWER FRONT TOWARDS YOU AND HANGING OFF THE COUNTER'S EDGE, WILL MAKE HAMMERING THE NAILS THOUGH THE DRAWER BOTTOM INTO THE DRAWER BACK EASIER.

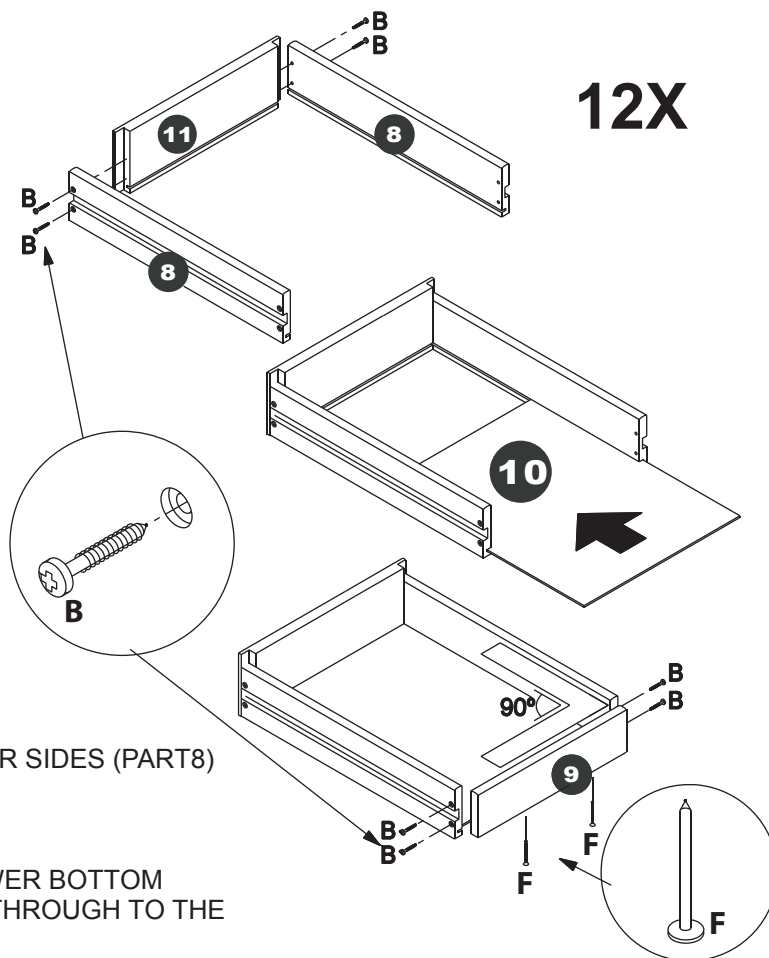

- ATTACH THE DRAWER HANDLE (PART G) TO THE DRAWER FRONT (PART 11) USING 2 PART I SCREWS, AS ILLUSTRATED.

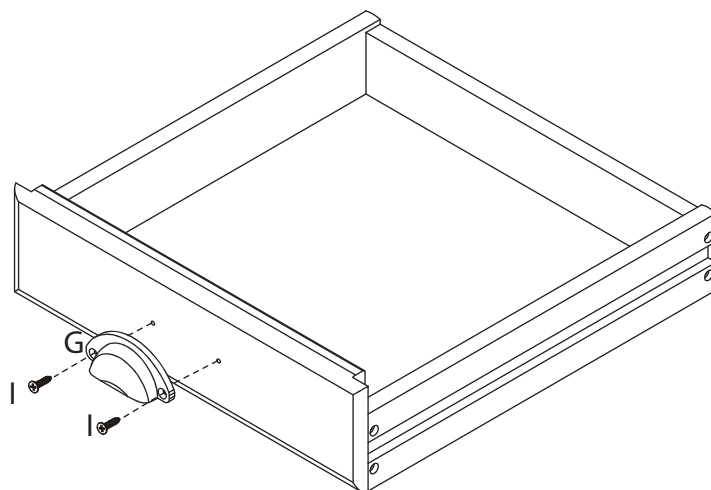

I=24



Screw
3,0 x 16mm

G=12



Handle

B=96



Screw
3,0 x 25mm

F=24



Nail


7

INSERT DRAWERS AND COMPLETE ASSEMBLY


- THE DRAWER SIDES (PART 8) HAVE A CHANNEL THROUGH THE MIDDLE OF THE PART. THIS CHANNEL SLIDES OVER THE DRAWER RUNNERS (PART D).
- SLIDE ALL DRAWERS IN. AND CHECK THE DRAWERS RUN SMOOTH. ONE DRAWER FRONT SHOULD NOT OVERLAP ANOTHER DRAWER FRONT EDGE.

TIP: IF THAT HAPPENS, THE DRAWER FRONT IS NOT ASSEMBLED LEVEL. SIMPLY BACK OUT ONE SET OF THE SCREWS ON A DRAWER SIDE (PART 8) AND ADJUST UNTIL IT IS TO YOUR SATISFACTION. (REMEMBER TO ALIGN THE BOTTOM EDGES OF THE DRAWER SIDES (PART 8) AND DRAWER FRONT (PART 11).

- STEP BACK TO LOOK AT THE UNIT. YOU MAY PREFER TO MOVE ONE DRAWER TO ANOTHER'S POSITION.

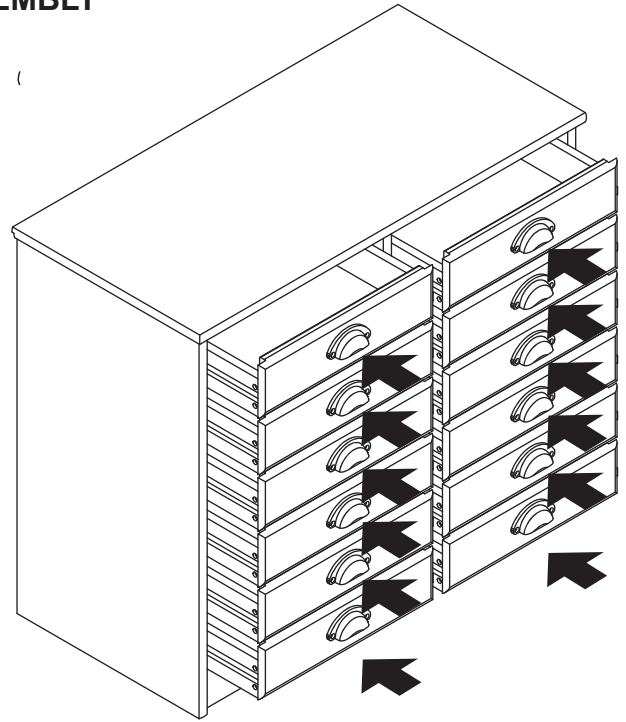

**COMPLETED ASSEMBLY:
THANK YOU FOR YOUR PURCHASE, AND WELCOME TO ADEPTUS!**

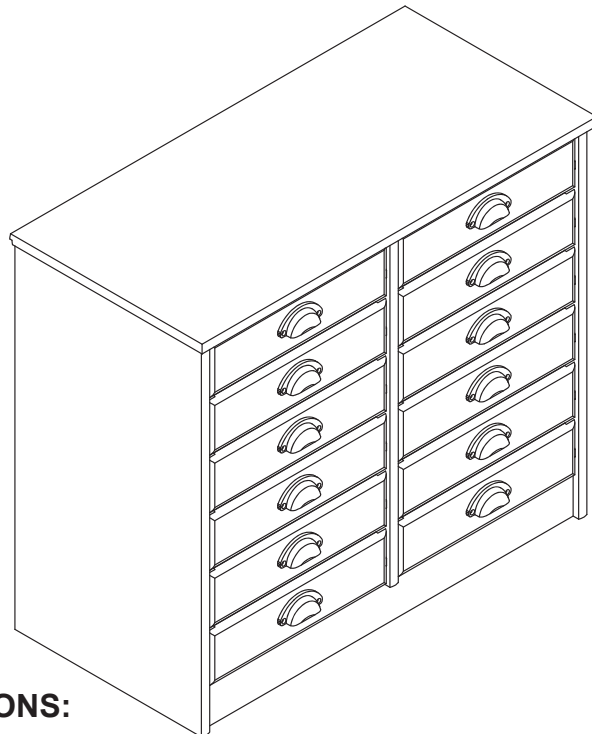

USE AND CARE INSTRUCTIONS:

CARE INSTRUCTIONS:

- NORMAL USE: WIPE WITH A CLEAN CLOTH.
- TO CLEAN SCUFFS: WIPE CLEAN WITH A SLIGHTLY DAMP CLOTH AND A MILD CLEANER. THEN WIPE DRY WITH A CLEAN CLOTH.
- OIL / WAX WILL DARKEN AND DEVELOP A PATINA ON THIS FURNITURE.

USE: MULTI-PURPOSE GENERAL STORAGE. USEFUL IN ANY ROOM OF THE HOME.

PLEASE VISIT WWW.ADEPTUS.COM TO REGISTER YOUR PRODUCT AND SEE OUR FULL PRODUCT LINE.