




ASSEMBLY INSTRUCTIONS

Easy Pieces Single Drawer End Table / Nightstand

56142 WHITE FINISH

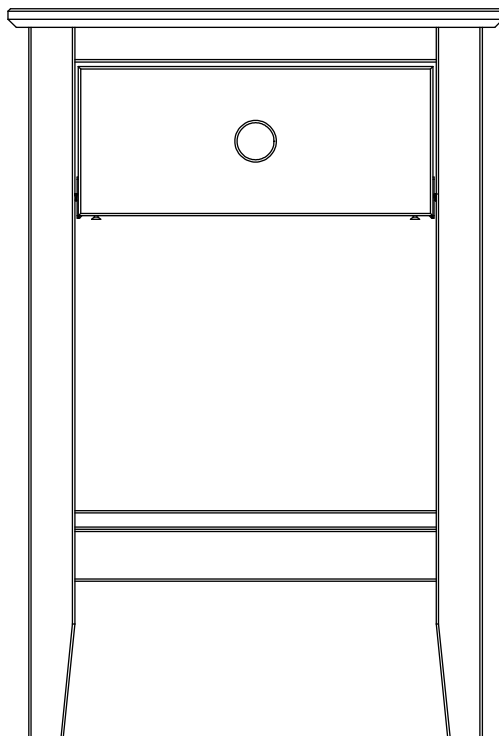

CUSTOMER SERVICE AND REPLACEMENT PARTS:

FOR FASTER SERVICE ON PARTS, PLEASE GO TO OUR WEBSITE AT WWW.ADEPTUS.COM;
OR CALL TOLL FREE 1.888.ADEPTUS (1.888.233.7887) FOR ASSEMBLY QUESTIONS.
MON-FRI 10 A.M. TO 4 P.M. E.S.T., CLOSED HOLIDAYS.

IF YOU CALL, PLEASE HAVE ON HAND:

- PRODUCT NAME AND STOCK NUMBER
- WHEN AND WHERE THE UNIT WAS PURCHASED
- P.O. NUMBER FROM THE BOTTOM OF THIS PAGE

IF WE ARE BUSY HELPING OTHER CUSTOMERS, PLEASE LEAVE YOUR NAME AND NUMBER
TO RECEIVE A RETURN CALL.

YOUR RETAILER MAY ALSO PROVIDE SERVICE OR PARTS.

HELPFUL OVERALL:

- SAVE THESE INSTRUCTION SHEETS AND THE BOX UNTIL YOU ARE SATISFIED WITH THE ASSEMBLY.
- DO NOT GLUE THE PARTS OF THE UNIT TOGETHER UNLESS YOU HAVE TESTED THE ASSEMBLY FIRST.
- PERFORM THE ASSEMBLY ON A CLEAN HARD SURFACE USING THE FLATTENED CARTON OR A TOWEL TO PROTECT THE SURFACE AND THE FINISH OF THE UNIT. DO NOT ASSEMBLE ON CARPET.

VISIT WWW.ADEPTUS.COM TO REGISTER YOUR PRODUCT AND SEE THE
COMPLETE ADEPTUS LINE. REGISTRATION IS REQUIRED FOR PARTS REQUESTS.

THANK YOU FOR YOUR PURCHASE AND WELCOME TO ADEPTUS!



NOTICE: THE WRITTEN INSTRUCTIONS CONTAINED HEREIN ARE COPYRIGHTED. © copyright all rights reserved

Many People, One Thought

PROVIDING QUALITY SOLID WOOD FURNITURE AT AN AFFORDABLE PRICE HAS BEEN A GROUP EFFORT. FROM CONCEPT TO PRODUCT DESIGN, MANUFACTURING AND RETAILING, EACH AREA FOCUSES ON THE DETAILS THAT WILL ASSURE YOU A LOW PRICE. BUT NEVER AT THE EXPENSE OF FUNCTION, STYLING, OR GOOD SENSE.

A "READY - TO - ASSEMBLE" ITEM REDUCES TRANSPORTATION AND WAREHOUSING COSTS WHICH HELP YOUR RETAILER KEEP THEIR PRICES REASONABLE. NOW, YOU ARE JOINING "TEAM ADEPTUS" WITH THE FINAL STEP, ASSEMBLY.

• YOU ASSEMBLE, YOU SAVE •

WELCOME TO ADEPTUS!




This is a **SOLID WOOD** product:

We inspect all wood and follow quality assurance guidelines that pass third-party inspections.


Note: Real wood has knots, small cracks, and what may look like blemishes. These characteristics are expected when producing furniture from natural material.

We take extra care with our drawer parts:

1. We use real wood drawer sides and drawer backs.
2. Drawer sides and backs are not finished to protect fabrics from any residual paint odor.
3. Drawer parts are finely sanded to prevent snags.

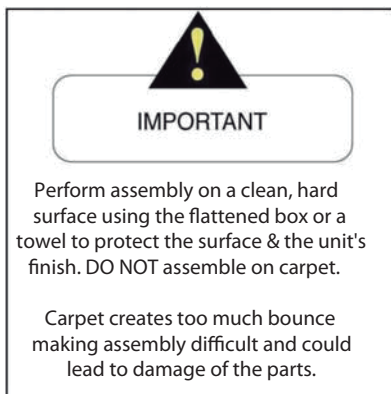


DO NOT FORCE OR OVER-TIGHTEN THE SCREWS. DOING SO CAN DAMAGE THE PARTS.

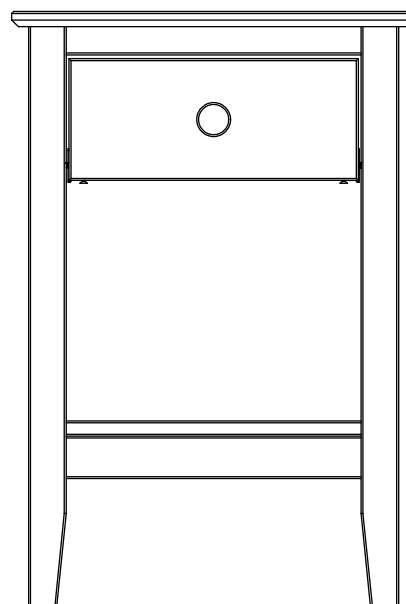


Safety and Care Advice



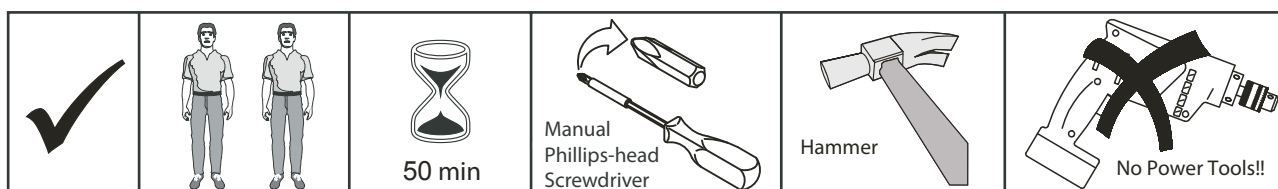







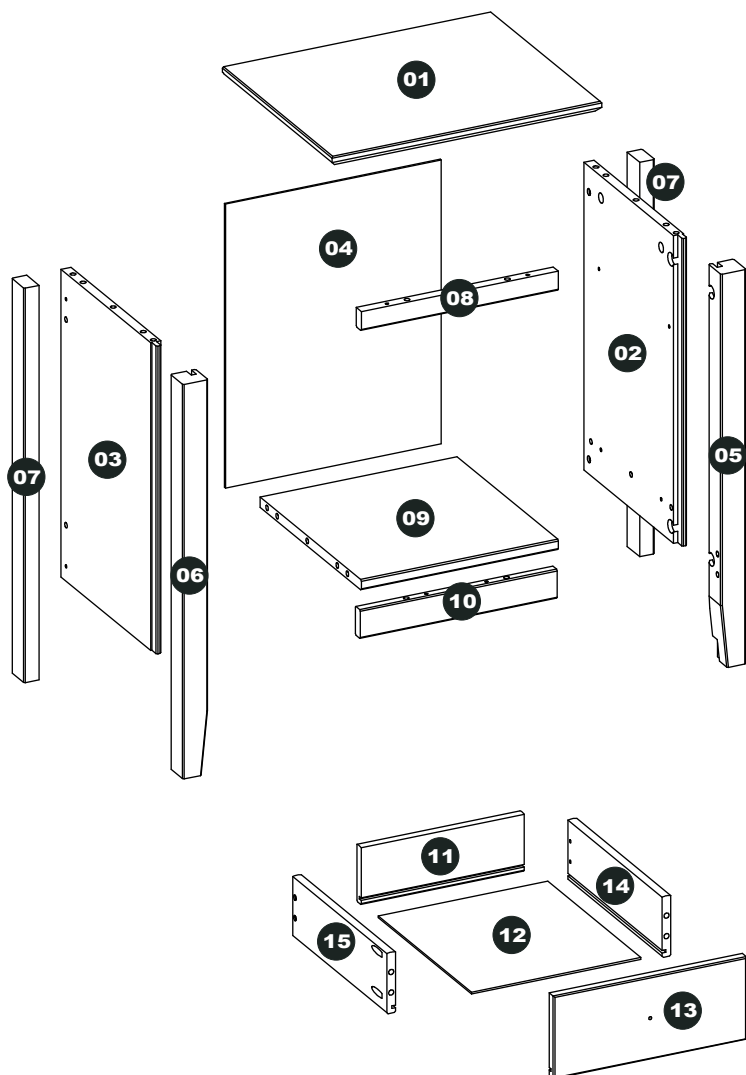



- Check that you have all the components and tools listed on pages 3 & 4.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Opened box can be used to protect your floor or counter during assembly.
- Assembly is easier for drawer parts on a counter.
- Parts of the assembly will be easier with 2 people.
- We do not recommend the use of power drill/drivers for inserting screws, as over-tightening could damage the unit.
- Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly. Please recycle the box. Go green
- Never sit, stand or allow children to climb on the assembled unit.

These tools are not supplied by the manufacturer.






01	Top
02	Right Side Panel
03	Left Side Panel
04	Back Panel
05	Right Front Foot
06	Left Front Foot
07	Back Foot
08	Top Crossbar
09	Bottom Panel
10	Front Crossbar
11	Drawer Back
12	Drawer Bottom
13	Drawer Front
14	Right Drawer Side
15	Left Drawer Side

A = 24 Dowel  8x30mm	B = 14 Screw  3.5x30mm	C = 05 Screw  4.0x40mm	D = 04 Screw  4.0x30mm	E = 06 Screw (Drawer Runner to Drawer side & anti-tip)  3.0x16mm
F = 04 Screw  4.0x12mm	G = 08 Cam lock 	H = 08 Minifix Screw  OR	I = 04 ZirFix 	J = 12 Back Panel Nail 
L = 04 Screw (Drawer Runner to Side Panel)  6.0x10mm	N = 01 Knob 	O = 01 (Right Side) Drawer Runner Set  DR CR	P = 01 (Left Side) Drawer Runner Set  CL DL	

1**PREPARE PARTS FOR ASSEMBLY**

INSERT DOWELS INTO THE PARTS, AS SHOWN.

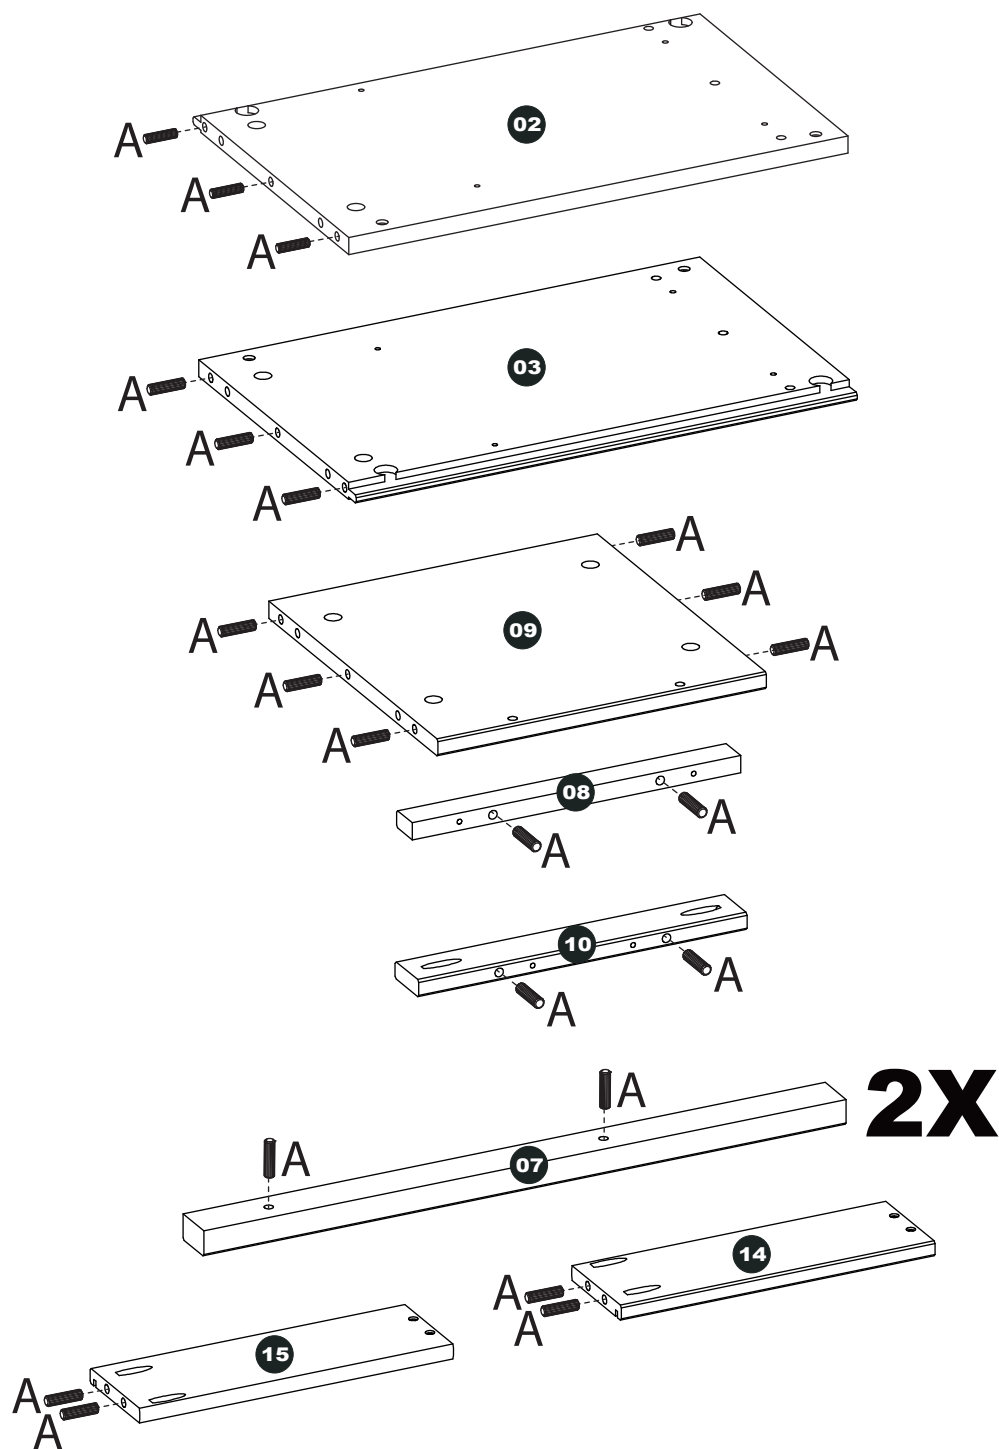


A = 24

Dowel




8x30mm

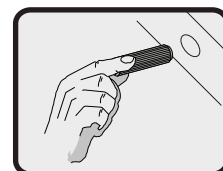

2


ATTACH SIDES PANELS AND BACK FEET

PLACE THE DOWELS FITTED IN THE HOLES ON THE SIDE, TAKE CARE OF THE FOOT DIRECTION AND FIX IT WITH PART B.

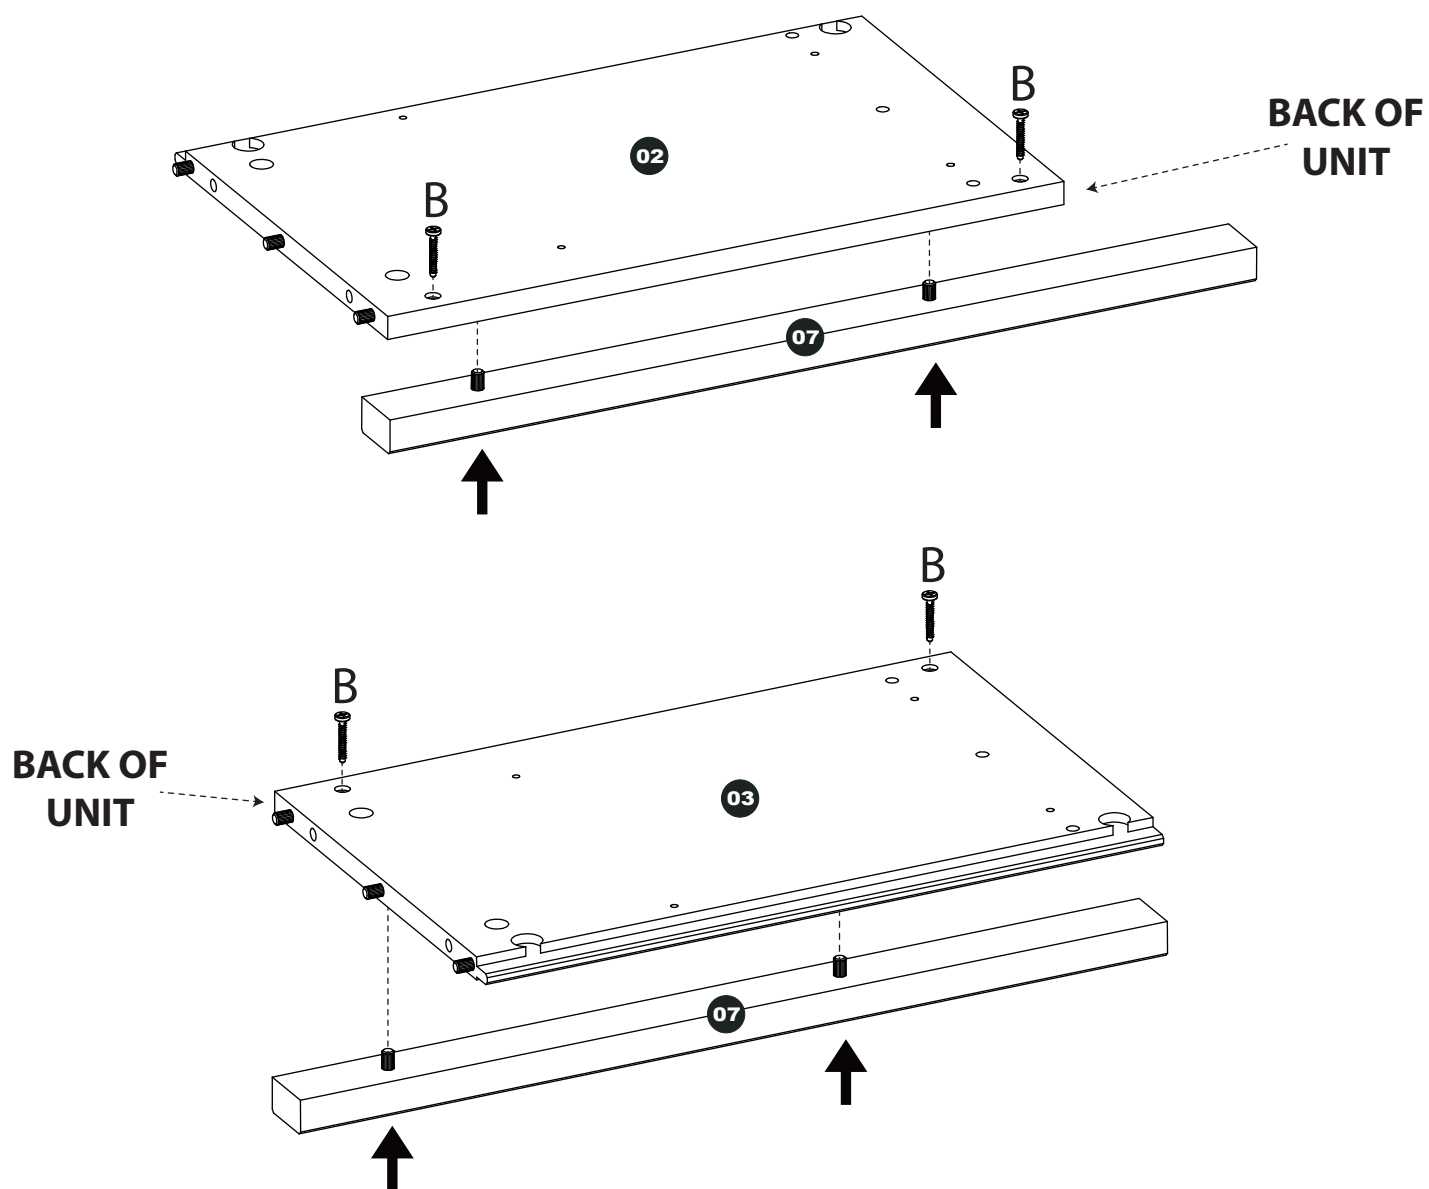


B = 04

Screw






3.5x30mm

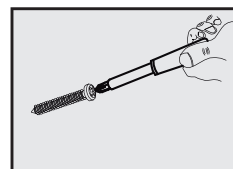



3

ATTACH SIDE PANELS AND FRONT FEET

FIT FOOT SIDE THROUGH CHANNEL, TAKE CARE OF FOOT DIRECTION, INSERT PART I AND FIX WITH PARTS D AND F AS SHOWN.

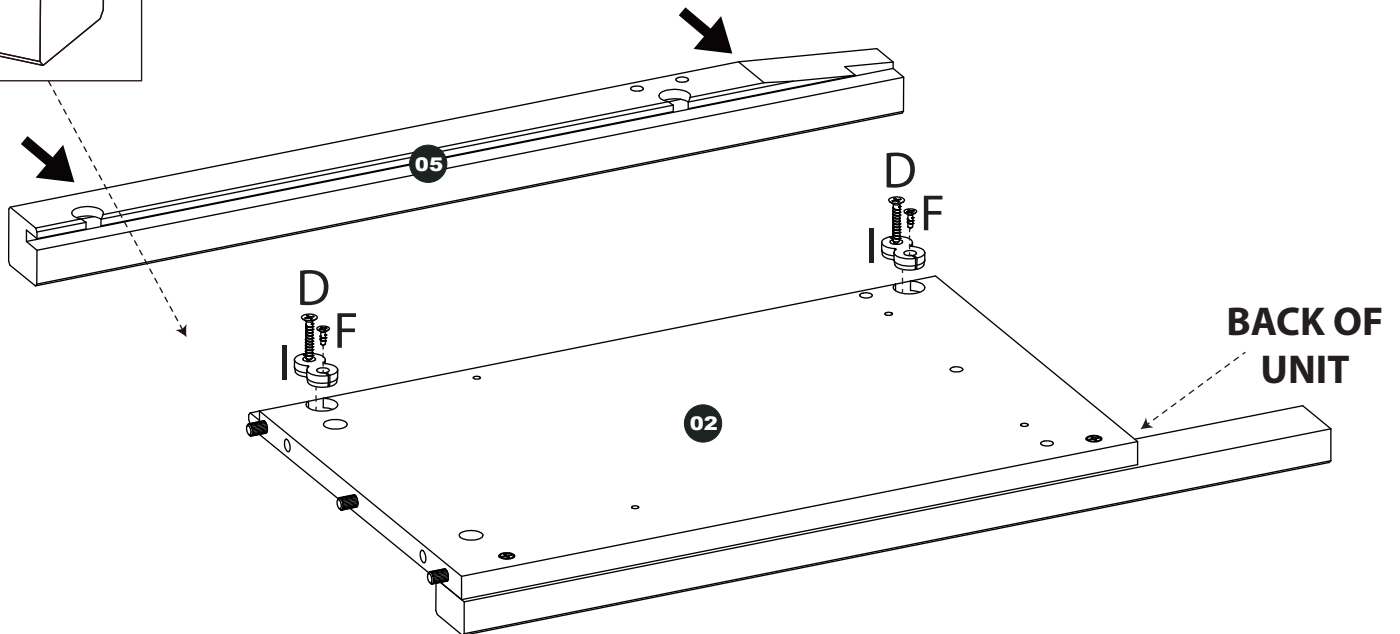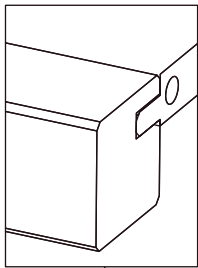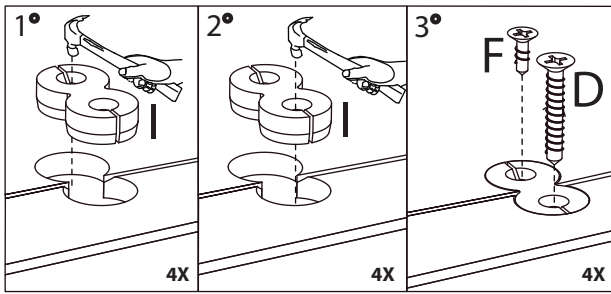

BACK OF
UNIT

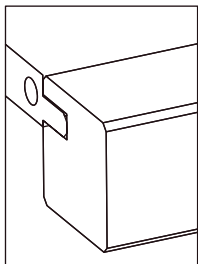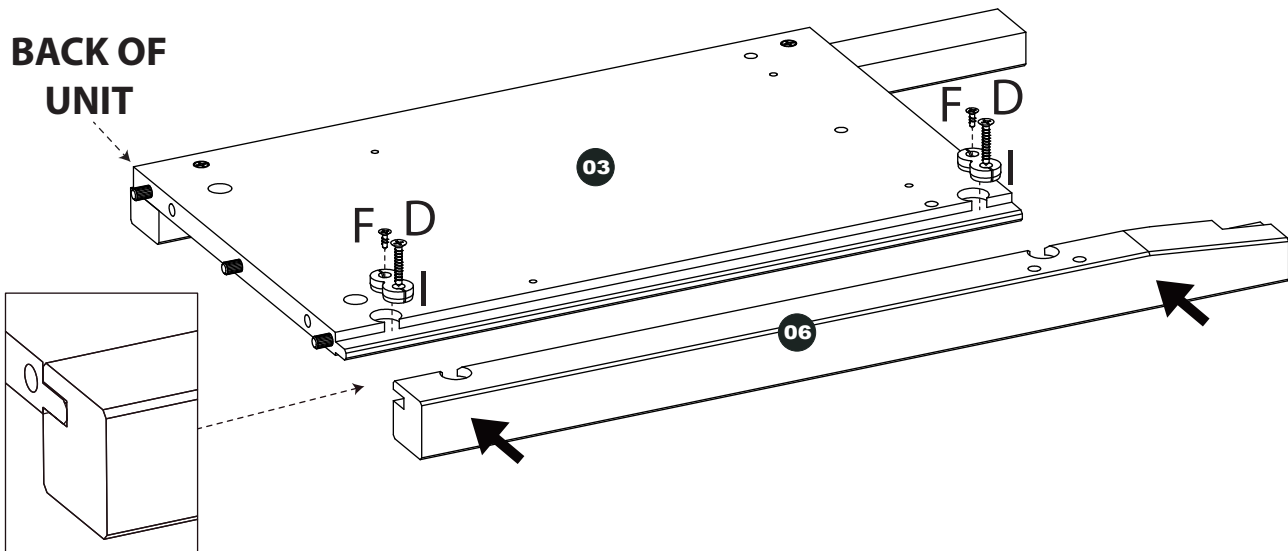

D = 04

Screw



4.0x30mm

F = 04


Screw



4.0x12mm


I = 04

ZirFix

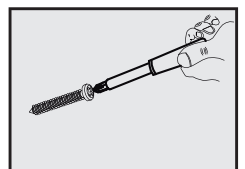

4 ATTACH DRAWER RUNNERS ON THE CABINET RIGHT SIDE PANEL




WITH THE WHEEL END OF THE RUNNER TOWARD THE FRONT (FINISHED) EDGE OF THE PANEL, ALIGN THE PRE-DRILLED HOLE ACOORDING TO THE DIAGRAM AND TIGTEEN WITH PART L.

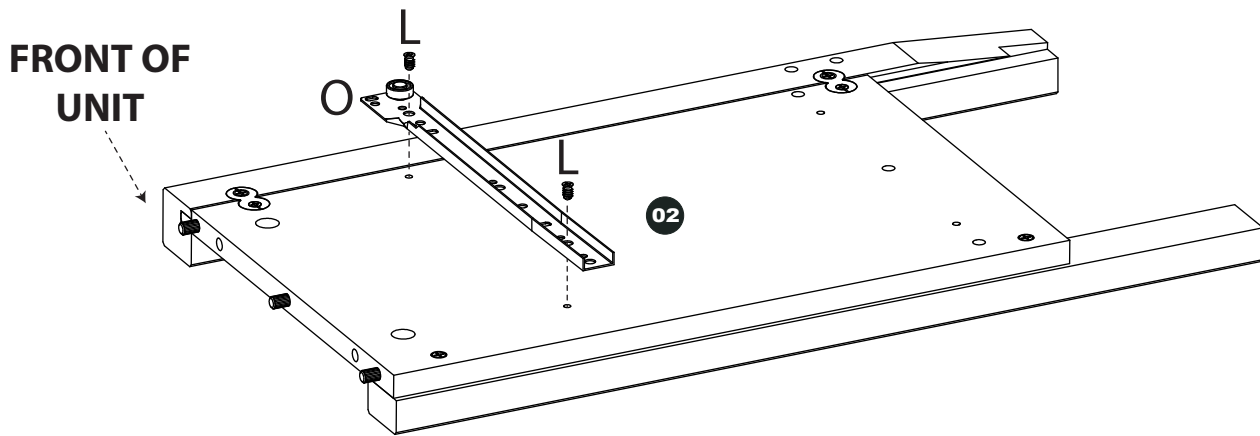

L = 02
Screw (Drawer Runner
to Side Panel)


6.0x10mm

O = 01 (Right Side)
Cabinet Right

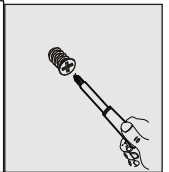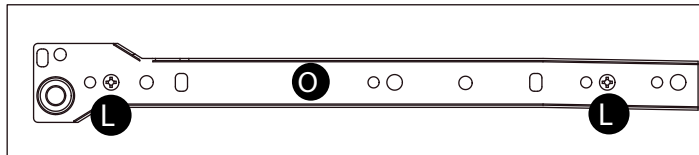

5 ATTACH DRAWER RUNNERS ON THE CABINET LEFT SIDE PANEL




WITH THE WHEEL END OF THE RUNNER TOWARD THE FRONT (FINISHED) EDGE OF THE PANEL, ALIGN THE PRE-DRILLED HOLE ACOORDING TO THE DIAGRAM AND TIGTEEN WITH PART L.

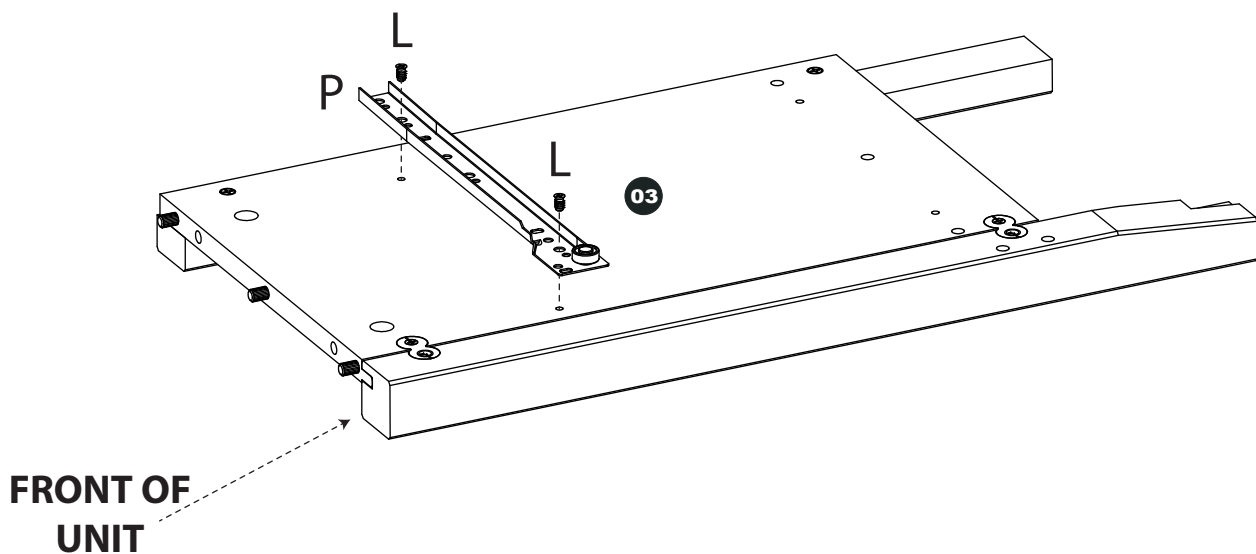

L = 02
Screw (Drawer Runner
to Side Panel)

6.0x10mm



P = 01 (Left Side)
Cabinet Left

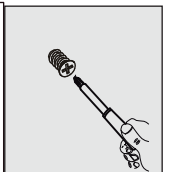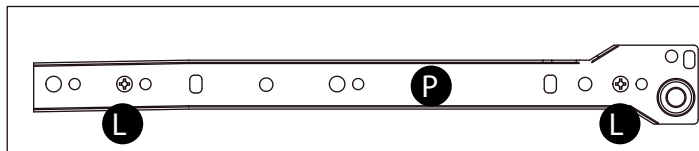

6

ATTACH MINIFIX ON THE SIDES PANEL

CAREFULLY CHECK THE HOLES INDICATED AND FIX PART H AS SHOWN.

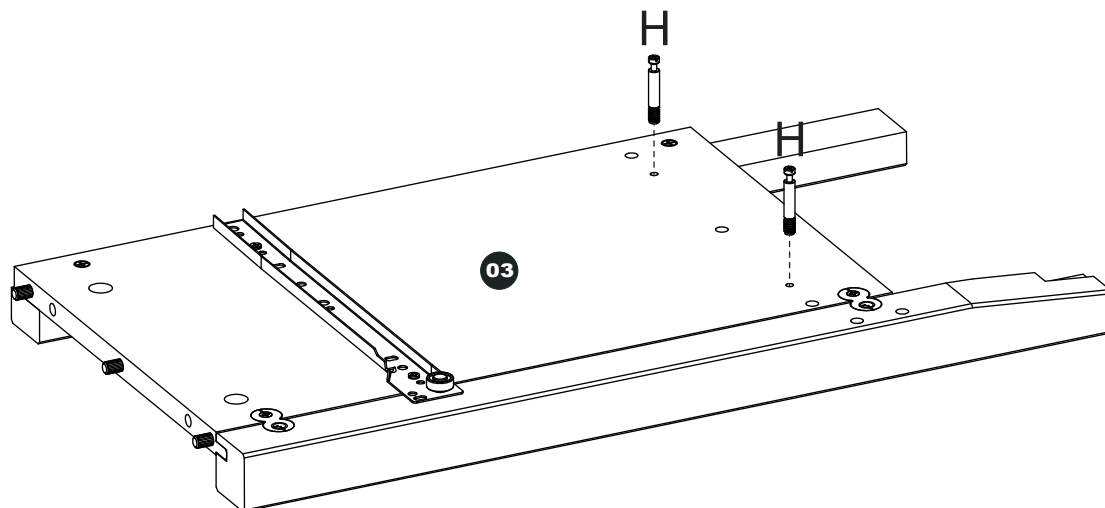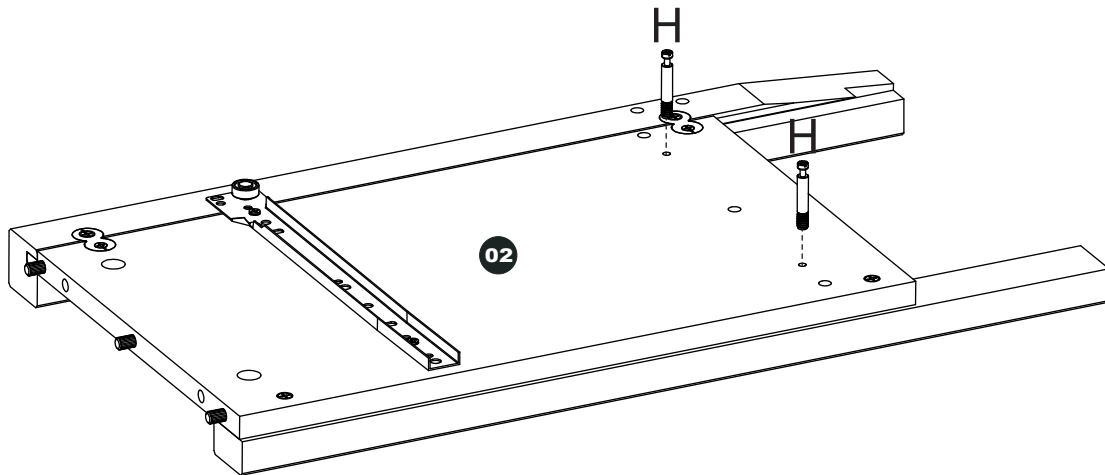


H = 04

Minifix Screw





DO NOT FORCE OR
OVER-TIGHTEN THE
SCREWS. DOING SO
CAN DIFICULT THE
ASSEMBLE

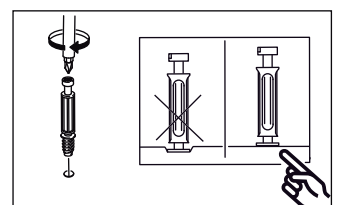


7

ATTACH RAILS


ATTACH TOP CROSSBAR IN THE TOP PANEL USING THE PART C AND FRONT CROSSBAR IN THE BOTTOM PANEL USING THE PART C AND.

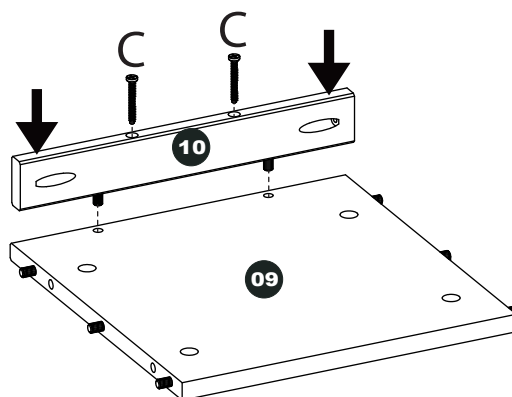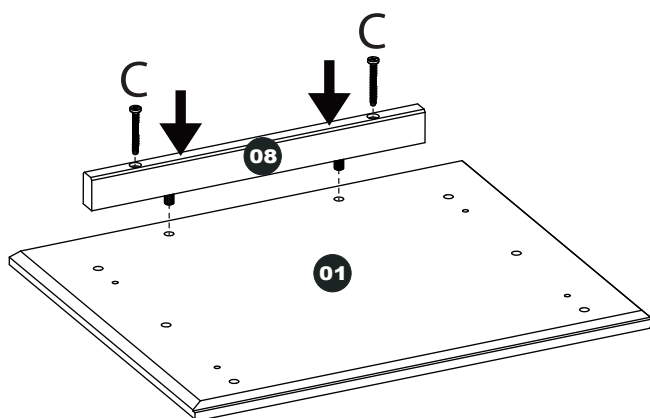

C = 04

Screw


4.0x40mm

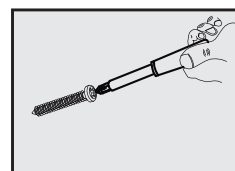

8

ATTACH MINIFIX TO THE TOP PANEL

CAREFULLY CHECK THE HOLES INDICATED AND FIX PART H AS SHOWN.

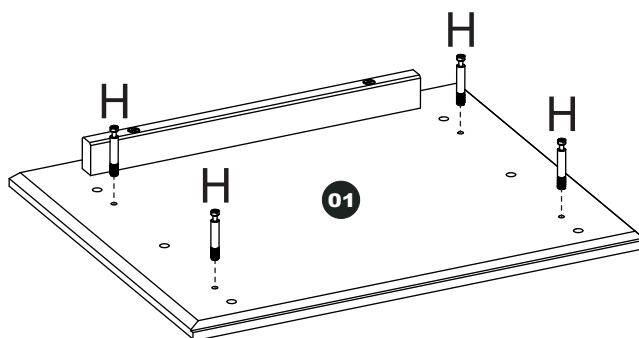


H = 04

Minifix Screw

OR




DO NOT FORCE OR
OVER-TIGHTEN THE
SCREWS. DOING SO
CAN DIFICULT THE
ASSEMBLE

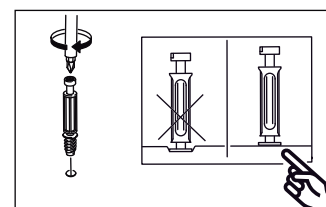

9


ATTACH BOTTOM PANEL TO THE SIDE PANELS

1. ALIGN THE DOWELS IN THE BOTTOM PANEL WITH THE DOWEL HOLES AND MINIFIX IN THE RIGHT SIDE PANEL. THEN PUSH PARTS TOGETHER UNTIL FLUSH.
2. SECURE EACH BOTTOM PANEL WITH ONE PART G AND B.
3. REPEAT THE PROCESS ON THE LEFT SIDE.

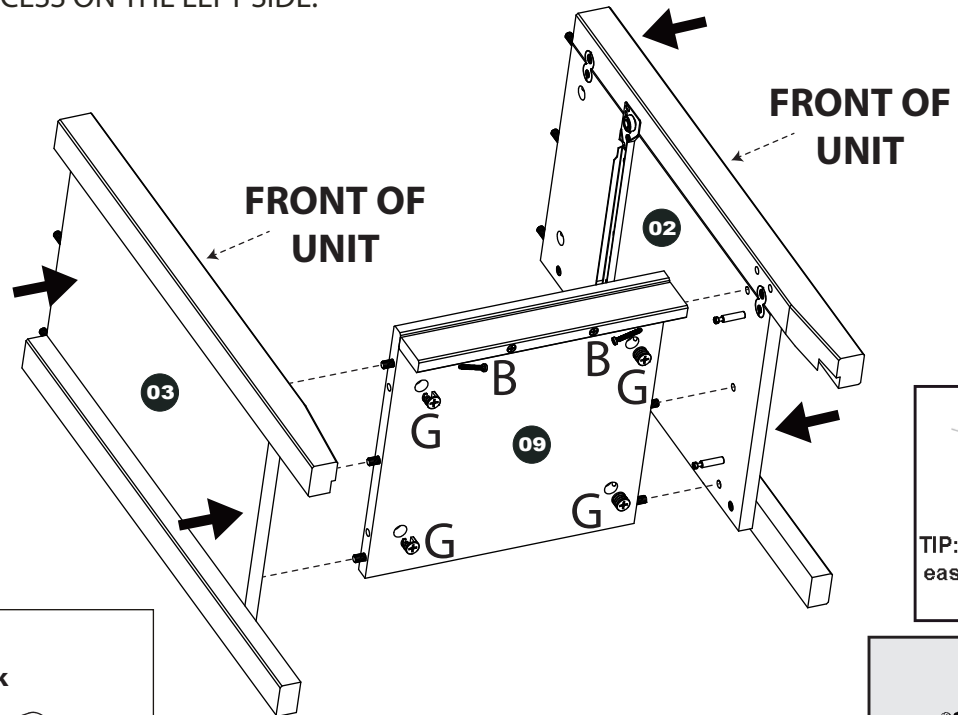

B = 02



Screw



3.5x30mm

G = 04


Cam lock

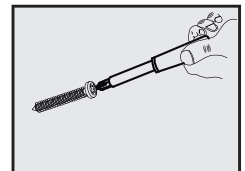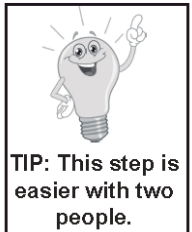

10



ATTACH THE TOP PANEL WITH SIDE PANELS

ALIGN THE DOWELS AND MINIFIX IN THE SIDE PANELS WITH THE PRE-DRILLED HOLES IN THE TOP PANEL, THEN THEY SHOW THE TOP OF MINIFIX IN THE HOLES ON THE SIDE, INSERT PART G AND PRESS AS SHOWN IN THE DIAGRAM.

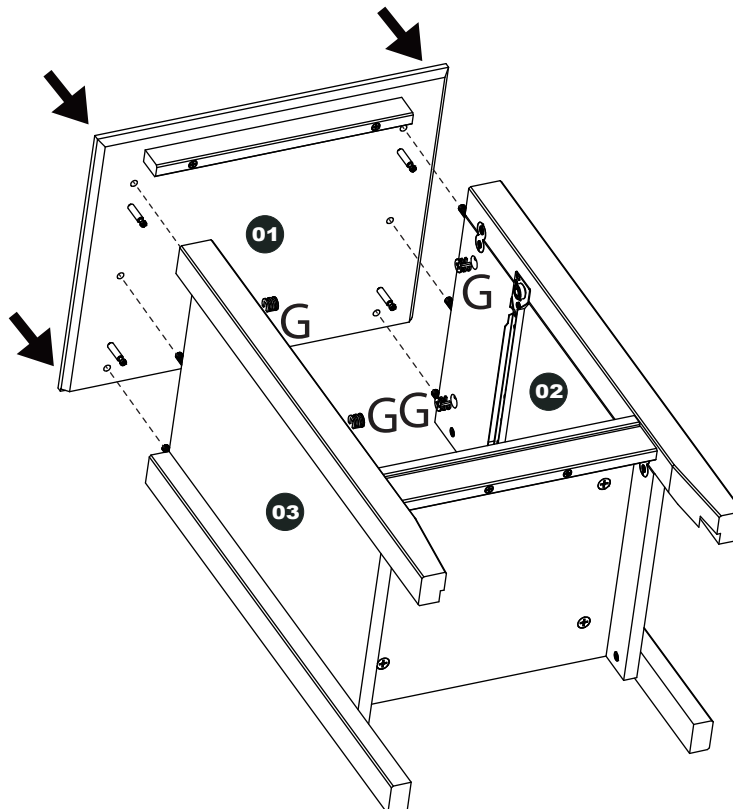

G = 04


Cam lock

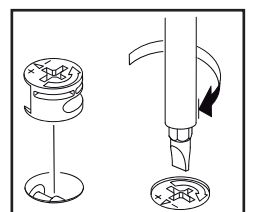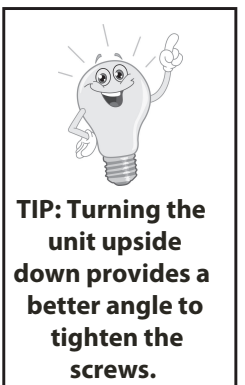

11

ATTACH THE BACK PANEL

1. UNFOLD THE BACK PANEL AND POSITION IT ON THE UNIT.
2. MAKE SURE THE BACK PANEL FITS INTO THE GROOVE ON THE BACK OF THE TOP PANEL.
3. SECURE THE BACK PANEL WITH THE BACK PANEL NAILS OBSERVING THE SQUARE.

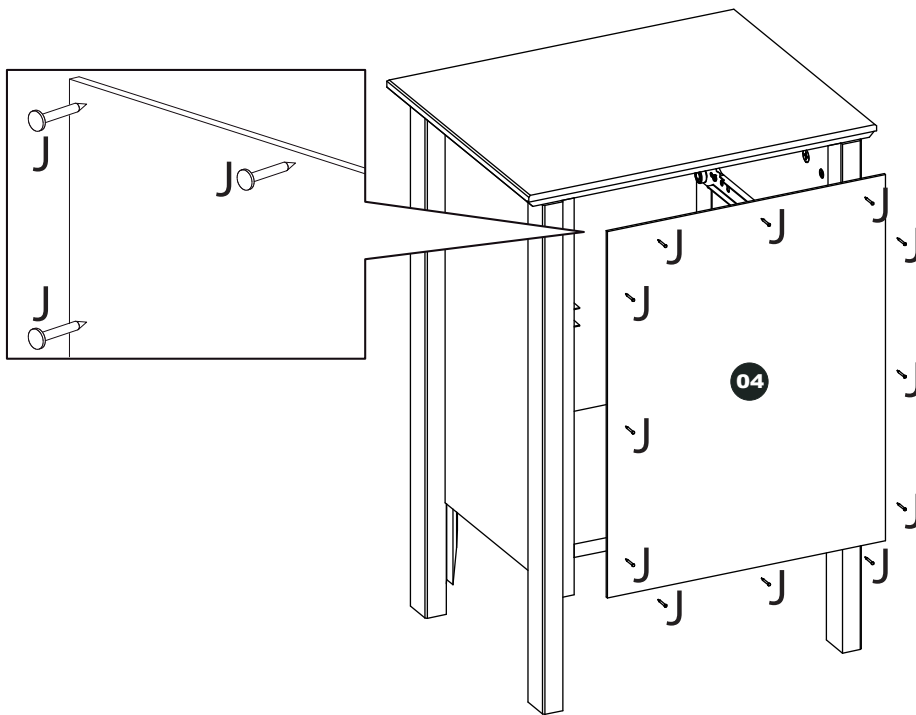


J = 12

Back Panel Nail




Use all back panels nails. Evenly spaced, they help make the unit strong.

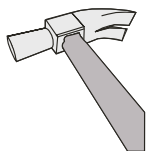


12

ASSEMBLE DRAWER BOX


IMPORTANT: MAKE SURE THE GROOVES IN THE DRAWER FRONT AND BOTH SIDES ALL ALIGN BEFORE TIGHTENING THE SCREWS.

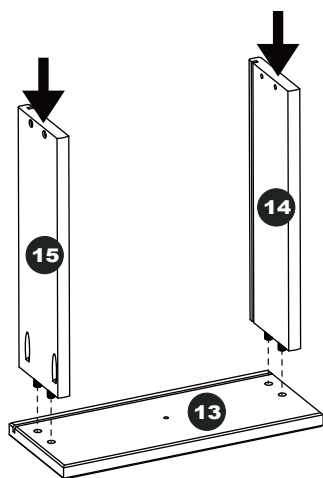


1. ALIGN THE DOWELS IN THE DRAWER SIDES WITH THE PRE-DRILLED HOLES IN THE DRAWER FRONT AND PUSH UNTIL THE PARTS ARE FLUSH.

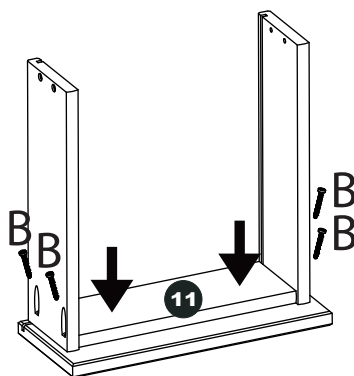


2. USE THE DRAWER BACK TO SUPPORT THE DRAWER SIDES. THEN SECURE THEM TO THE DRAWER FRONT.

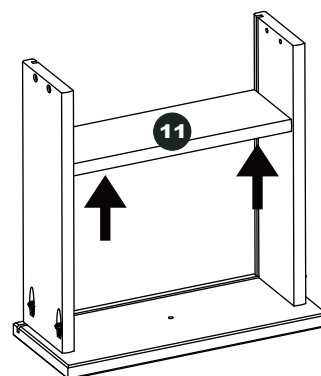


3. REMOVE THE DRAWER BACK.

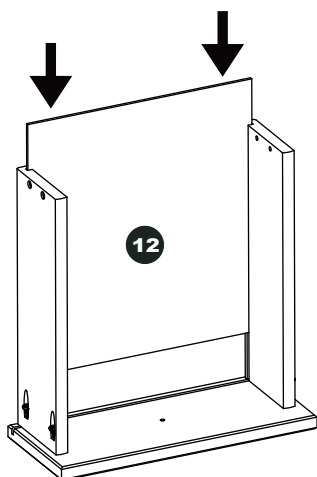

4. SLIDE IN THE DRAWER BOTTOM. MAKE SURE IT IS ALL THE WAY FORWARD & IN THE GROOVE ON THE DRAWER FRONT.

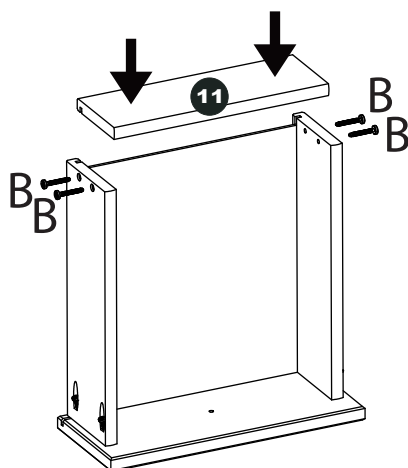


5. MAKE SURE THE DRAWER BOTTOM IS IN THE GROOVE IN THE DRAWER BACK AND THE DRAWER BACK IS FLUSH WITH THE DRAWER SIDES. SECURE WITH 2 PART C ON EACH SIDE.

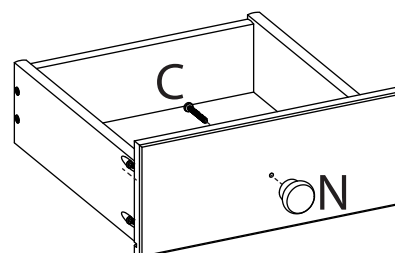

6. ATTACH THE KNOB TO THE DRAWER FRONT.

B = 08


Screw



3.5x30mm

C = 01



Screw



4.0x40mm


N = 01

Knob

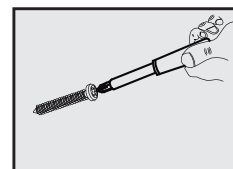





13 ATTACH DRAWER RUNNERS

1. POSITION THE RIGHT DRAWER RUNNER "DR" WITH THE WHEEL TOWARD THE BACK OF THE DRAWER AND THE FRONT END ALL THE WAY FORWARD TOUCHING THE DRAWER FRONT.
2. FIRST SCREW GOES IN THE THIRD HOLE BACK FROM THE DRAWER FRONT.
3. SECOND SCREW GOES IN THE FIFTH BACK HOLE FROM THE DRAWER FRONT.
4. THIRD SCREW GOES IN FROM THE SIDE THROUGH THE FIRST HOLE IN FRONT OF THE WHEEL.
5. REPEAT THE PROCESS ON THE LEFT SIDE AND FOR EACH DRAWER.

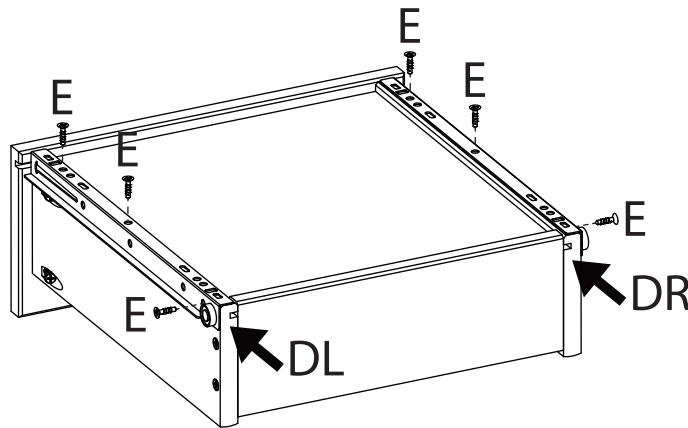


TIP: To make this step easier, place the drawer upside down on a counter with the drawer front hanging off the edge. This will allow the drawer box to lay flat and provide better control for tightening the screws.

E = 06 Screw (Drawer Runner to Drawer side & anti-tip)  3.0x16mm	O = 01 (Right Side) Drawer Right Runner  DR	P = 01 (Left Side) Drawer Left Runner  DL
---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------

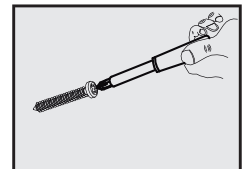


14 INSERT THE DRAWER IN THE UNIT

1. START AT THE BOTTOM AND WORK UP.
2. HOLDING THE FRONT END OF THE DRAWER SIDES, TILT THE BACK OF THE DRAWER UPWARDS TO GET THE WHEELS ON THE DRAWER PAST THE WHEELS ON THE UNIT. ONCE THE WHEELS ARE CLEAR, LEVEL OUT THE DRAWER AND SLIDE IT IN.

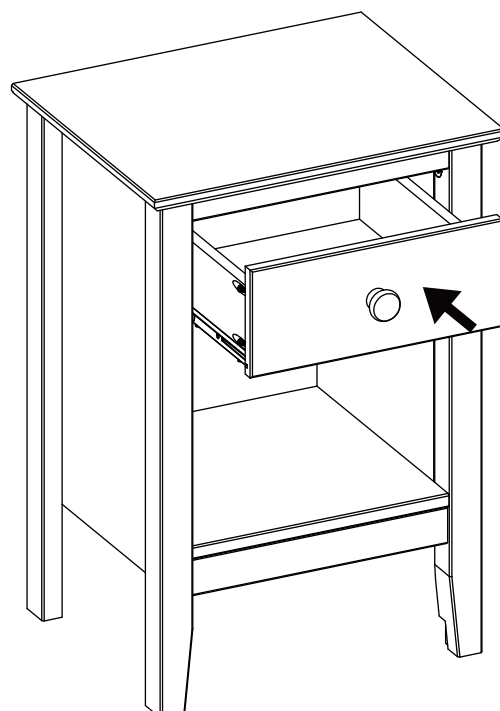

DO NOT STORE HEAVY ITEMS INSIDE DRAWER, TO REDUCE THE POSSIBILITY OF TIP-OVER.

COMPLETED ASSEMBLY:
THANK YOU FOR YOUR PURCHASE, AND WELCOME TO ADEPTUS!

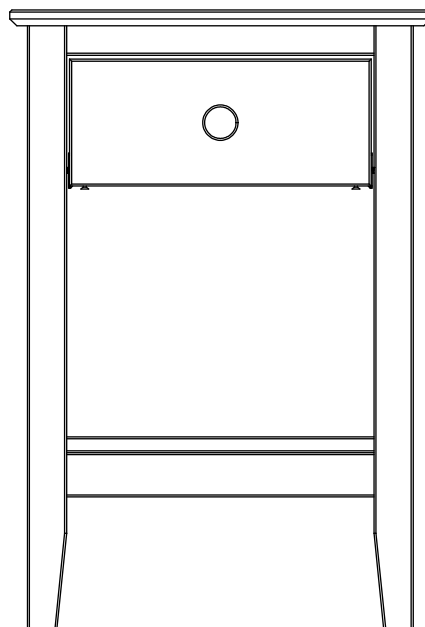

CARE INSTRUCTIONS:

NORMAL USE: WIPE WITH A CLEAN CLOTH.

WHEN NEEDED TO CLEAN SCUFFS: WIPE CLEAN WITH A SLIGHTLY DAMP CLOTH AND A MILD CLEANSER. THEN WIPE DRY WITH A CLEAN CLOTH. DO NOT USE HARSH CHEMICALS. OCCASIONALLY CHECK THAT THE SCREWS IN THE UNIT REMAIN TIGHT.

USE:

CHEST OF DRAWERS FOR HOME STORAGE OF LINENS, CLOTHING AND ACCESSORIES.



01.07.2022 - Rev. 0